

X-CLASS Heavy-Duty Pump NX standard chemical pump ISO 2858 / DIN EN 22858

Original operating manual

NX series



Version BA-2018.08.23
Print-No. 300 785
TR MA DE Rev002

STÜBBE GmbH & Co. KG
Hollwieser Straße 5
32602 Vlotho
Germany
Phone: +49 (0) 5733-799-0
Fax: +49 (0) 5733-799-5000
E-mail: contact@stuebbe.com
Internet: www.stuebbe.com



Subject to technical modifications.
Read carefully before use.
Save for future use.

Table of contents

1	About this document	5	5.7	Aligning the coupling precisely	22
1.1	Target groups	5	5.8	Removal and installation of the coupling guard	23
1.2	Other applicable documents	5	5.8.1	Removing the coupling guard	23
1.3	Warnings and symbols	6	5.8.2	Installing the coupling guard	23
2	General safety instructions	7	5.9	Planning pipelines	23
2.1	Intended use	7	5.9.1	Specifying supports and flange connections	23
2.2	General safety instructions	8	5.9.2	Specifying nominal widths	24
2.2.1	Product safety	8	5.9.3	Specifying pipe lengths	24
2.2.2	Obligations of the operating company	8	5.9.4	Provide self-priming container	24
2.2.3	Obligations of personnel	9	5.9.5	Optimizing changes of cross section and direction	24
2.3	Specific hazards	9	5.9.6	Planning expansion joints	24
2.3.1	Hazardous pumped liquids	9	5.9.7	Planning a non-return valve	24
2.3.2	Potentially explosive atmospheres	9	5.9.8	Planning venting facilities and pressure gauges	24
3	Layout and Function	10	5.9.9	Discharging leaks	25
3.1	Marking	10	5.9.10	Providing safety and control devices (recommended)	25
3.1.1	Name plate	10	5.10	Connecting the pipes	25
3.1.2	ATEX type plate	10	5.10.1	Keeping the piping clean	25
3.1.3	Pump type code	11	5.10.2	Installing auxiliary pipes	25
3.1.4	– Mechanical seal type code	11	5.10.3	Installing the suction pipework	26
3.2	Description	12	5.10.4	Installing the pressure pipe	26
3.2.1	NX pump	12	5.10.5	Inspection for stress-free pipe connections	26
3.2.2	NX ATEX pump	12	5.11	Planning the electrical system	26
3.3	Assembly	13	5.12	Electrical connection	26
3.4	Shaft seals	13	5.12.1	Connecting the motor	26
3.4.1	Single-acting STÜBBE PTFE bellows-type mechanical seal	13	5.12.2	Check direction of rotation	26
3.4.2	Single-acting STÜBBE mechanical seal, type UV2	16	5.13	Performing the hydrostatic test	27
3.4.3	Double-acting STÜBBE mechanical seal, type UV3 / Metax G-SBA	16	6	Operation	28
4	Transport, Storage and Disposal	17	6.1	Preparing for commissioning	28
4.1	Transport	17	6.1.1	Check downtimes	28
4.1.1	Unpacking and inspection on delivery	17	6.1.2	Lubricate an oil-lubricated pump with oil	28
4.1.2	Lifting	17	6.1.3	Filling and bleeding	28
4.2	Storage	18	6.1.4	Preparing auxiliary systems (if present)	28
4.3	Disposal	18	6.2	Commissioning	28
5	Installation and connection	19	6.2.1	Switching on	28
5.1	Preparing for installation	19	6.2.2	Switching off	29
5.1.1	Check operating conditions	19	6.3	Shutting down the pump	29
5.1.2	Preparing the installation site	19	6.4	Restoring the pump to service	29
5.1.3	Prepare foundation and surface	19	7	Maintenance	30
5.2	Installing with foundation	20	7.1	Inspections	30
5.2.1	Place pump unit on the foundation	20	7.2	Servicing	30
5.2.2	Attaching pump unit	20	7.2.1	Maintenance in accordance with maintenance schedule	31
5.3	Installing without foundation	20	7.2.2	Lubricate bearings	32
5.4	Installing motor	21	7.2.3	Cleaning the pump	32
5.5	Install the coupling	21	7.3	Dismounting	33
5.6	Aligning motor	22	7.3.1	Preparations for dismounting	33

7.4	Replacement parts and return	33
8	Troubleshooting	34
9	Appendix	38
9.1	Replacement parts	38
9.1.1	Part no. and description	38
9.1.2	Sectional drawing	40
9.2	Technical specifications	41
9.2.1	Ambient conditions	41
9.2.2	Parameters for auxiliary systems	41
9.2.3	Sound pressure level	42
9.2.4	Tolerance values for adjusting the coupling	44
9.2.5	Flange tightening torques	45
9.2.6	Tightening torques of casing screws	45
9.2.7	Lubrication	46
9.2.8	Lubricant	46
9.2.9	Flushing quantities	47
9.2.10	Operational limits	49
9.2.11	Connection loads	49
9.2.12	Switching frequency	49
9.3	Special tool	49
9.4	Declaration of conformity in accordance with EC machinery directive	50

List of figures

Fig. 1	Name plate (example)	10
Fig. 2	ATEX type plate (example)	10
Fig. 3	Pump type code (example)	11
Fig. 4	Mechanical seal type code (example)	11
Fig. 5	Assembly	13
Fig. 6	Simple bellows mechanical seal, inner flushing variant	14
Fig. 7	Simple bellows mechanical seal, inner flushing and quenching	14
Fig. 8	Single acting mechanical seal, continuous flushing	15
Fig. 9	Single acting bellows mechanical seal, flushing after use	15
Fig. 10	Single-acting mechanical seal, type UV2	16
Fig. 11	Single-acting mechanical seal, type UV3	16
Fig. 12	Attaching lifting gear to the pump unit	17
Fig. 13	Attach lifting gear to pump	17
Fig. 14	Installation with foundation	20
Fig. 15	Installation without foundation	20
Fig. 16	Possible misalignments	22
Fig. 17	Removal and installation of the coupling guard	23
Fig. 18	Straight pipe lengths in front and after the pumps (recommended)	24
Fig. 19	Sectional drawing	40

List of tables

Tab. 1	Other application documents, purpose and where found	5	Tab. 29	Switching frequency	49
Tab. 2	Warnings and symbols	6	Tab. 30	Special tool	49
Tab. 3	Pressure test	27			
Tab. 4	Measures to be taken if the pump is shut down	29			
Tab. 5	Measures depending on the behavior of the pumped liquid	29			
Tab. 6	Maintenance schedule	31			
Tab. 7	Fault/number assignment	34			
Tab. 8	Troubleshooting list	37			
Tab. 9	Designation of components according to part numbers	39			
Tab. 10	Ambient conditions	41			
Tab. 11	Sealing liquid pressure and exit temperature	41			
Tab. 12	Sound pressure (LpA) / sound power level (LwA) of the motor in db(A)	42			
Tab. 13	Sound pressure (LpA) / sound power level (LwA) of the pump without motor in db(A)	43			
Tab. 14	Tolerance values for adjusting the coupling	44			
Tab. 15	Flange tightening torques	45			
Tab. 16	Tightening torques of casing screws	45			
Tab. 17	Lubricant quantities	46			
Tab. 18	Lubricant	46			
Tab. 19	Flushing quantities for continuous flushing, bearing bracket size (LTG) 1 to 3	47			
Tab. 20	Flushing quantities for continuous flushing, bearing bracket size (LTG) 4	47			
Tab. 21	Flushing quantities for quenching / continuous quenching, bearing bracket size (LTG) 1 to 3	47			
Tab. 22	Flushing quantities for quenching / continuous quenching, bearing bracket size (LTG) 4	47			
Tab. 23	Flushing quantities for double-acting mechanical seal, bearing bracket size (LTG) 1 to 3	48			
Tab. 24	Flushing quantities for double-acting mechanical seal, bearing bracket size (LTG) 4	48			
Tab. 25	Volumetric flow of liquid medium	49			
Tab. 26	Maximum supply pressure	49			
Tab. 27	Operating temperature and operating excess pressure of liquid medium	49			
Tab. 28	Pump size and maximum speed	49			

1 About this document

This manual:

- is part of the equipment
- applies to all series referred to
- describes safe and proper operation during all operating phases

1.1 Target groups




Operating company

- Responsibilities:
 - Always keep this manual accessible where the device is used on the system.
 - Ensure that employees read and observe this document, particularly the safety instructions and warnings, and the documents which also apply.
 - Observe any additional country-specific rules and regulations that relate to the system.

Qualified personnel, fitter








- Mechanics qualification:
 - Qualified employees with additional training for fitting the respective pipework
- Electrical qualification:
 - Qualified electrician
- Transport qualification:
 - Qualified transport specialist
- Responsibility:
 - Read, observe and follow this manual and the other applicable documents, especially all safety instructions and warnings.

1.2 Other applicable documents

To download: ATEX additional manual (300 365) Additional instructions for use in explosive atmospheres www.stuebbe.com/pdf_manuals/300365.pdf	
 To download: Resistance lists Resistance of materials used to chemicals www.stuebbe.com/pdf_resistance/300051.pdf	
To download: Data sheet Technical data and conditions of operation www.stuebbe.com/pdf_datasheets/300779.pdf	
CE declaration of conformity Conformity with standards (→ 9.4 Declaration of conformity in accordance with EC machinery directive, Page 50).	


Tab. 1 Other application documents, purpose and where found

1.3 Warnings and symbols

Symbol	Meaning
	<ul style="list-style-type: none"> • Immediate acute risk • Death, serious bodily harm
	<ul style="list-style-type: none"> • Potentially acute risk • Death, serious bodily harm
	<ul style="list-style-type: none"> • Potentially hazardous situation • Minor injury
	<ul style="list-style-type: none"> • Potentially hazardous situation • Material damage
	<p>Safety warning sign</p> <ul style="list-style-type: none"> ▶ Take note of all information highlighted by the safety warning sign and follow the instructions to avoid injury or death.
	Instruction
1., 2., ...	Multiple-step instructions
✓	Precondition
→	Cross reference
	Information, notes

Tab. 2 Warnings and symbols

2 General safety instructions

 The manufacturer accepts no liability for damage caused by disregarding any of the documentation.

2.1 Intended use

- Only use the pump with suitable media (→ resistance lists).
- Do not use pump for combustible or explosive fluids.
- Adhere to the operating limits and size-dependent minimum flow rates (→ [Table 25 Volumetric flow of liquid medium, Page 49](#)).
- Avoid dry running:
 - Initial damage, such as destruction of bearings, seals and plastic parts, will occur within a few seconds.
 - Make sure the pump is only operated with, and never without, pumped liquid.
 - Ensure that the sealing chamber is sufficiently filled and ventilated.
 - Ensure that there are no excessively high amounts of gas in the pumping medium.
 - Only operate pump within the permissible operating range.
 - Ensure that the insertion of valves or filters does not make the pressure too low on the inlet side of the pump.
 - Ensure that high temperatures and/or low suction pressure at the suction side do not cause the pressure in the pump to fall below the vapor pressure of the pumped medium, and do not cause gas bubbles form at the mechanical seal.
 - Ensure that no air is being drawn in via the mechanical seal due to low supply pressure.
 - In case of doubt provide a double-acting mechanical seal.
- Avoid cavitation:
 - Open the suction-side fitting and do not use it to regulate the flow.
 - Do not open the pressure-side fitting beyond the agreed operating point.
- Avoid overheating:
 - Do not operate the pump while the pressure-side fitting is closed.
 - Observe the minimum flow rate (→ [Table 25 Volumetric flow of liquid medium, Page 49](#)).
- Avoid damage to the motor:
 - Do not open the pressure-side fitting beyond the agreed operating point.
 - Note the maximum permissible number of times the motor can be switched on per hour (→ manufacturer's specifications).
- Consult with the manufacturer regarding any other use of the device.
- If pumps are delivered without motors, then final assembly as a pump assembly must take place in accordance with the provisions of machinery directive 2006/42/EC.
- Only use the pump as part of large systems/tools.


Operate the pump in an explosion hazard environment (ATEX)

- Do not use pump for combustible or explosive fluids.
- Do not operate the pump with the isolation devices (such as gate valves and stop valves) closed.
- Operate the pump at the permissible minimum volumetric flow rate (→ [Table 25 Volumetric flow of liquid medium, Page 49](#)).
- Ensure the necessary pressure and volumetric flow rate at the auxiliary ports (quench liquid / blocking liquid).
- Comply with the maintenance intervals.
- The pump must be operated with two-way mechanical seals, in order to avoid exceeding the upper temperature limit in the event of dry running.

Prevention of obvious misuse (examples)

- Observe pump limits of use regarding temperature, pressure, flow and speed (→ data sheet).
- The power consumption of the pump increases as the specific gravity of the pumped fluid increases. Adhere to the permissible specific gravity in order to eliminate the possibility that the pump, coupling and motor become overloaded (→ data sheet).
A lower specific gravity is permissible. Adapt the auxiliary systems accordingly.
- When conveying fluids containing solids, observe the limit values for proportions of solid particles and particle size (→ Data sheet, technical description).
- When using auxiliary plant systems:
 - Ensure compatibility of the operating medium with the product medium.
 - Ensure constant supply of the relevant operating medium.
- Pumps used with water as the pumped liquid must not be used for foodstuffs or drinking water. Use for food or drinking water only if specified in the data sheet.
- When drawing flushing water from the normal drinking water main:
 - Use system separator for drink water main
- The type of installation should be selected only in accordance with these operating instructions. For example, the following are not allowed:
 - Suspension within pipework runs of pumps mounted on base plates
 - Overhead installation
 - Installation in the immediate vicinity of extreme heat or cold sources
 - Installation too close to a wall

2.2 General safety instructions

 Observe the following regulations before carrying out any work.

2.2.1 Product safety

The pump has been built according to state-of-the-art technology and the recognized technical safety regulations. Nevertheless, operation of the pump can still put the life and health of the user or third parties at risk or damage the pump or other property.

- Operate the pump only if it is in perfect technical condition and use it only as intended, staying aware of safety and risks, and in adherence to the instructions in this manual.
- Keep this manual and all other applicable documents complete, legible and accessible to personnel at all times.
- Refrain from any procedures and actions that would pose a risk to personnel or third parties.
- In the event of any safety-relevant faults, shut down the pump immediately and have the fault corrected by appropriate personnel.
- In addition to the entire documentation for the product, comply with statutory or other safety and accident-prevention regulations and the applicable standards and guidelines in the country where the pump is operated.

2.2.2 Obligations of the operating company

Safety-conscious working

- Operate the pump only if it is in perfect technical condition and use it only as intended, staying aware of safety and risks, and in adherence to the instructions in this manual.
- Ensure that the following safety aspects are observed and monitored:
 - Intended use
 - Statutory or other safety and accident-prevention regulations
 - Safety regulations governing the handling of hazardous substances
 - Applicable standards and guidelines in the country where the pump is operated
 - Applicable guidelines of the operator
- Make personal protective equipment available.

Qualified personnel

- Make sure all personnel tasked with work on the pump have read and understood this manual and all other applicable documents, especially the safety, maintenance and repair information, before they start any work.
- Organize responsibilities, areas of competence and the supervision of personnel.
- Ensure that all work is carried out by specialist technicians only:
 - Installation, repair and maintenance work
 - Transportation
 - Work on the electrical system
- Make sure that trainee personnel only work on the pump under supervision of specialist technicians.

Safety equipment

- Provide the following safety equipment and verify its functionality:
 - For hot, cold and moving parts: pump safety guarding provided by the customer
 - For pumps without capability to run dry: Dry run protection
 - For potential electrostatic charging: provide suitable grounding

Warranty

- Obtain the manufacturer's approval prior to carrying out any modifications, repairs or alterations during the warranty period.
- Only use genuine parts or parts that have been approved by the manufacturer.

2.2.3 Obligations of personnel

- All directions given on the pump must be followed (and kept legible), e.g. the arrow indicating the sense of rotation and the markings for fluid connections.
- Pump, coupling guard and components:
 - Do not step on them or use as a climbing aid
 - Do not use them to support boards, ramps or beams
 - Do not use them as a fixing point for winches or supports
 - Do not use them for storing paper or similar materials
 - Do not use the hot pump or motor components as a heating point
 - Do not de-ice the pump using gas burners or similar tools
- Do not remove the safety guarding for hot, cold or moving parts during operation.
- Use personal protective equipment if necessary.
- Only carry out work on the pump while it is not running.
- Before all installation and maintenance work, disconnect the motor from the mains and secure it against being switched back on again.
- Never reach into the suction or discharge flange.
- Following all work on the pump, refit safety devices in accordance with the instructions and bring into service.

2.3 Specific hazards

2.3.1 Hazardous pumped liquids

- When handling hazardous fluids, observe the safety regulations for the handling of hazardous substances.
- Use personal protective equipment when carrying out any work on the pump.
- Collect leaking pumped liquid and residues in a safe manner and damage them in accordance with environmental regulations.

2.3.2 Potentially explosive atmospheres

Observe ATEX additional manual

- Additional instructions for use in explosive atmospheres
- www.stuebbe.com/pdf_manuals/300365.pdf



3 Layout and Function

3.1 Marking

3.1.1 Name plate

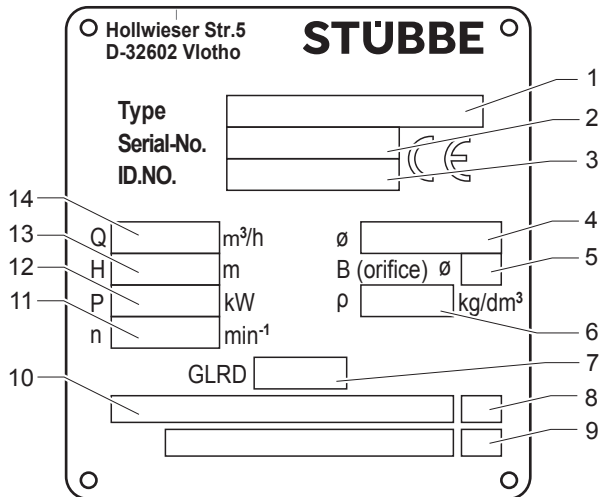


Fig. 1 Name plate (example)

- 1 Pump type
- 2 Serial number
- 3 Identification number
- 4 Impeller diameter [mm]
- 5 Diaphragm diameter
- 6 Specific gravity
- 7 Mechanical seal code
- 8 Specifications for shaft sleeve
- 9 Secondary seal
- 10 Shaft seal information
- 11 Rotational speed
- 12 Power consumption
- 13 Differential head
- 14 Flow rate

3.1.2 ATEX type plate

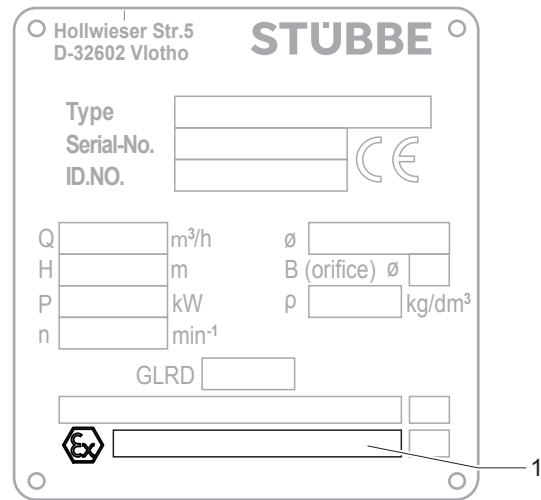


Fig. 2 ATEX type plate (example)

- 1 Explosion protection label

3.1.3 Pump type code

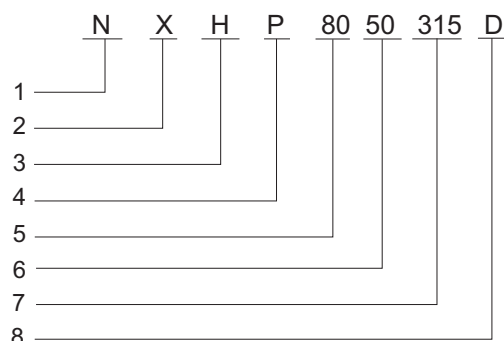


Fig. 3 Pump type code (example)

- 1 Design type
 - **N** – Standard pump
- 2 Pump series
 - **X** – X-CLASS heavy-duty pump
- 3 Hydraulic system
 - **H** – Half-open impeller
 - **G** – Closed impeller
 - **F** – 3-channel free-flow impeller
 - **S** – Closed impeller with front vanes and back vanes
- 4 Material of the volute casing
 - **P** – PP (polypropylene)
 - **E** – UHMW-PE ultra-high molecular weight low-density polyethylene)
 - **D** – PVDF (polyvinylidene fluoride)
 - **T** – PTFE/PFA (polytetrafluorethylene / perfluoralkoxy polymer)
 - **H** – UHMW-PE (conductive)
 - **I** – PVDF (conductive)
 - **L** – PTFE/PFA (conductive)
- 5 Suction bore diameter
- 6 Discharge bore diameter
- 7 Impeller nominal diameter
- 8 Name affix (optional)
 - **D** – Restricting orifice mounted directly on the discharge flange
 - **V** – Vertical installation
 - **S** – Special version

3.1.4 – Mechanical seal type code

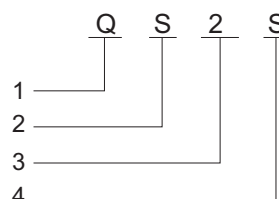


Fig. 4 Mechanical seal type code (example)

- 1 Version
 - **E** – Single acting mechanical seal
 - **Q** – Single acting mechanical seal with quench
 - **D** – Double acting mechanical seal
- 2 Manufacturer of the atmospheric side mechanical seal
 - **S** – STÜBBE
- 3 Type
 - **T** – PTFE bellows (standard)
 - **E** – Bellows od UHMW-PE
 - **2** – UV2 (high-pressure single acting mechanical seal)
 - **3** – UV3 (high-pressure double acting mechanical seal)
- 4 Flushing connection
 - **N** – Standard version (without flushing)
 - **D** – Continuous flushing
 - **S** – Flushing after use

3.2 Description

3.2.1 NX pump

Metalclad chemical standard pumps, plastic, in process design corresponding to standard ISO 2858 / DIN EN 22858 to pressure rating PN16. The sizes NX 40-25-160, NX 100-65-315 and NX 250-200-400 are based on the standard (transnorm pumps)

- Horizontal single-stage non self-priming centrifugal pump
- Hydraulically efficient with half-open, closed and 3-channel free-flow impellers (dependent on size)
- Bearing unit can be removed with the impeller without having to dismantle the volute casing, pipework or motor.
- Thick-walled and replaceable plastic casing, metalclad
- Generously dimensioned fixed/loose bearings as standard
- Universal shaft for all available mechanical seals
- Proprietary mechanical seal module (single-acting and double-acting)
- Bearings sealed for life, alternatively heavy-duty bearing with grease or oil lubrication
- optional:
 - Block design pump (type BX) with integral shaft bearings and flanged motor
 - Customer-specific hydraulics on request

Pump assembly

- With clamped double Cardan shaft coupling as standard
- Sturdy coupling guard of PE or various metals
- Motor with integral motor plate adjustable for height for easy alignment (size-dependent)
- Multi-coat epoxy resin paint finish with top coat RAL 2002 (blood orange)

3.2.2 NX ATEX pump

NX pumps and units with special approval can be used as devices for category 2G or 3G in explosion hazard environments (zone 1 and zone 2) (ATEX).

The ATEX conformity is shown on the name plate (→ [Figure ATEX type plate \(example\)](#), [Page 10](#)). A declaration of conformity to the EU - Explosion Protection Directive 2014/34/EU must also be provided.

3.3 Assembly

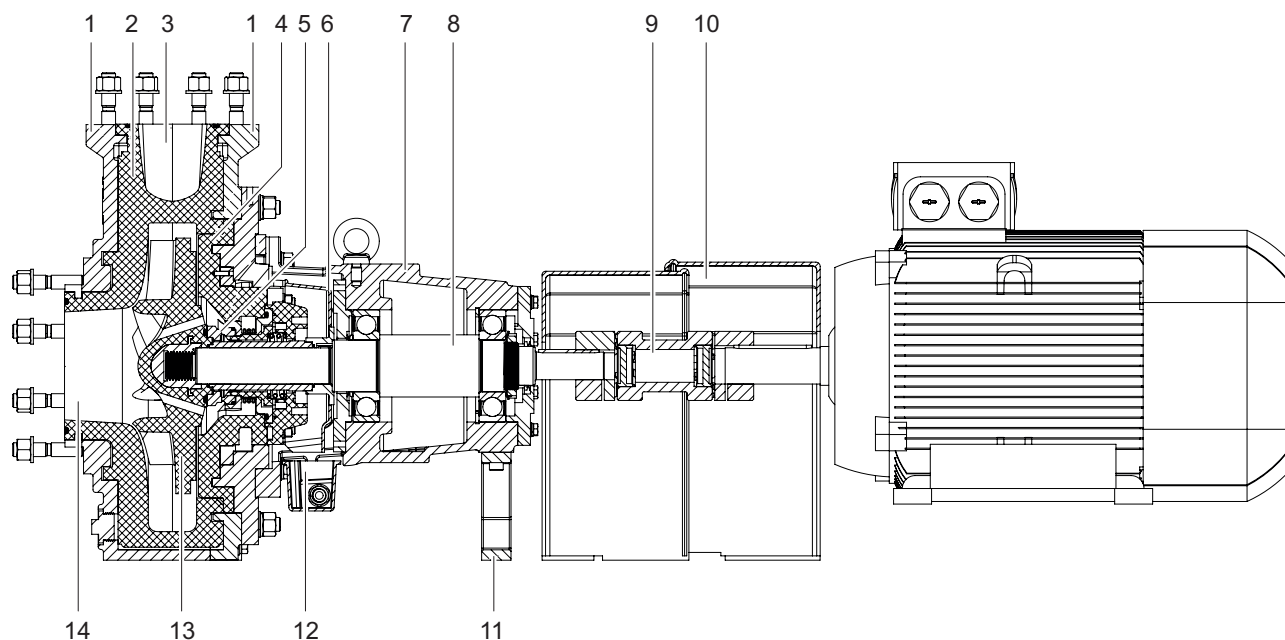



Fig. 5 Assembly

- | | | |
|-----------------------------|-----------------------------|---------------------------------------|
| 1 Armored casing of GGG40.3 | 6 Splash guard | 11 Support foot |
| 2 Volute casing of plastic | 7 Bearing casing of GGG40.3 | 12 Leakage tray with drain connection |
| 3 Discharge flange | 8 Shaft of steel (1.7227) | 13 Impeller of plastic |
| 4 Sealing insert of plastic | 9 Coupling | 14 Suction branch |
| 5 Mechanical seal | 10 Coupling guard | |

3.4 Shaft seals

 Only one of the following shaft seals can be used.

3.4.1 Single-acting STÜBBE PTFE bellows-type mechanical seal

- Sprung (PTFE) bellows (481)
- General-purpose chemical resistance since the spring does not come into contact with the medium
- Up to 115 °C and up to 3 bar(g) inlet pressure
- Up to 8 bar(g) static pressure
- At rotating seal rings and stationary seal rings, torques are transmitted by extremely stable splining (and not by a clamp fit) (high break-away torque in the event of sticking and adhesive forces)
- Suitable for media containing solids
- If required can be configured with quenching and/or continuous flushing or standstill flushing

A) Variant with inner flushing (product flushing) – API plan 01 type ESTN

- For non-critical applications
- Flushing the mechanical seal with liquid medium (product)

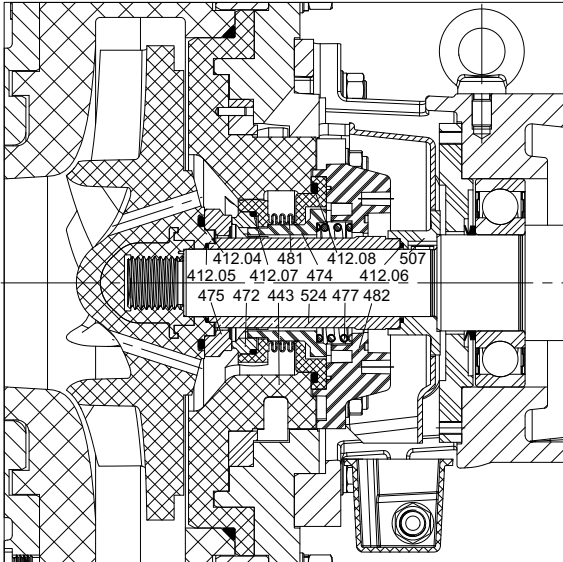


Fig. 6 Simple bellows mechanical seal, inner flushing variant

B) Inner flushing variant and quenching – API plan 62 type QSTN

- Atmosphere-side seal of the bellows carrier (482) by radial seal (421.3)
- The resulting cavity is filled with quench fluid (such as de-ionized water):
 - At pressures between 0.8 and 8 bar the quench fluid flow is limited to 30 ltr / h
 - This prevents formation of crystals within the mechanical seal
 - Protects against the mechanical seals running hot when there is a partial vacuum in the shaft seal cavity
 - Can be used even on versions with continuous quenching (with quenching vessel). Used here without a flow limiter
- Ensure free discharge of the quench liquid, maximum pressure in the quench cavity 0.5 bar(g)

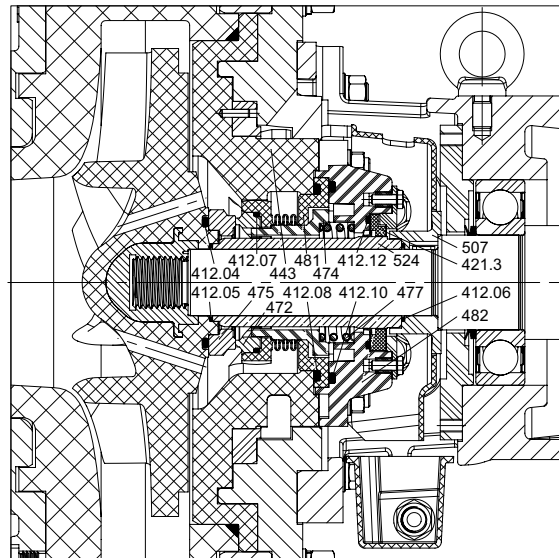


Fig. 7 Simple bellows mechanical seal, inner flushing and quenching

C) Variant with continuous flushing – API plan 32 type ESTD

- Suitable for media containing solids
- Flushes the mechanical seal with clean liquid (such as water)
- Delimitation of the flushing medium by a throttle section (labyrinth seal) within the pump
- Flushing volume is dependent on the solids content and pump size 40 – 250 ltr/h (→ 9.2.9 Flushing quantities, Page 47).
- It is useful to install a flow meter and a valve for controlling the flushing flow

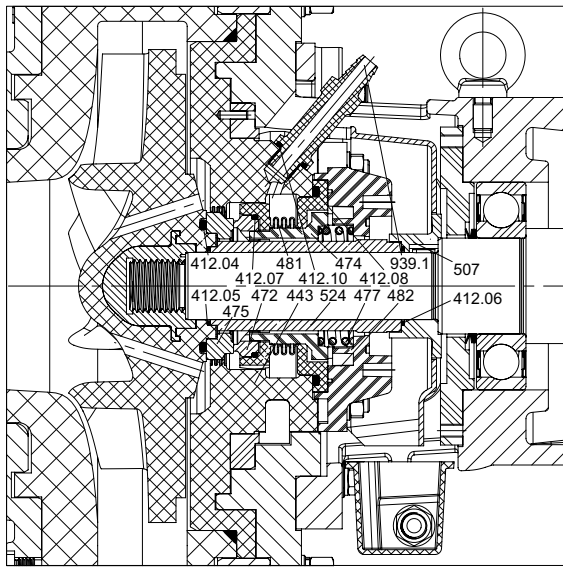


Fig. 8 Single acting mechanical seal, continuous flushing

D) Variant for flushing after use, type ESTS

- Design similar to the continuous flushing (C) variant, but without the throttle section
- For use with media containing solids, where for process reasons the flushing medium must not mix with the process medium
- Flushes the mechanical seal with clean liquid (such as water) immediately the pump is switched off
- Prevents sedimentation when the pump is stationary, and crystallization within the pump in the area of the mechanical seal
- Flushing medium industrial use water, minimum approx. 40 ltr in 5 minutes

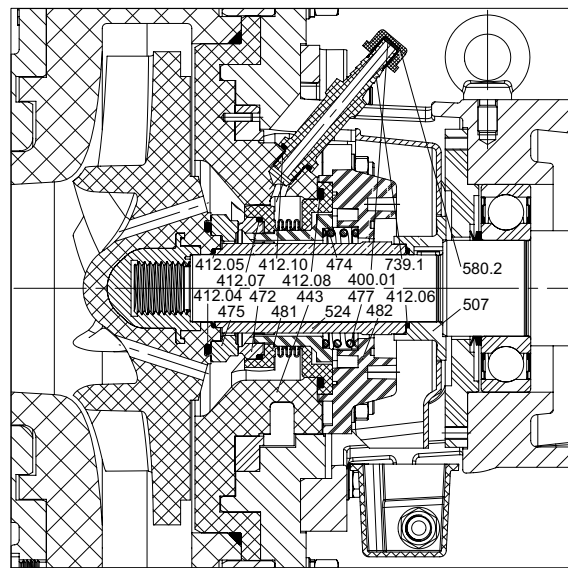


Fig. 9 Single acting bellows mechanical seal, flushing after use

3.4.2 Single-acting STÜBBE mechanical seal, type UV2

- General-purpose chemical resistance
- Sturdy high-pressure spring single mechanical seal in REA version
- Up to 160 °C and up to 8 bar(g) inlet pressure
- Up to 16 bar(g) static pressure
- Stationary seal ring of SSiC
- Rotating seal ring of SSiC
- Suitable for media containing solids and applications with high inlet pressures
- At rotating seal rings and stationary seal rings, torques are transmitted by extremely stable splining
- Suitable for media containing solids
- If required can be configured with quenching and/or continuous flushing or standstill flushing

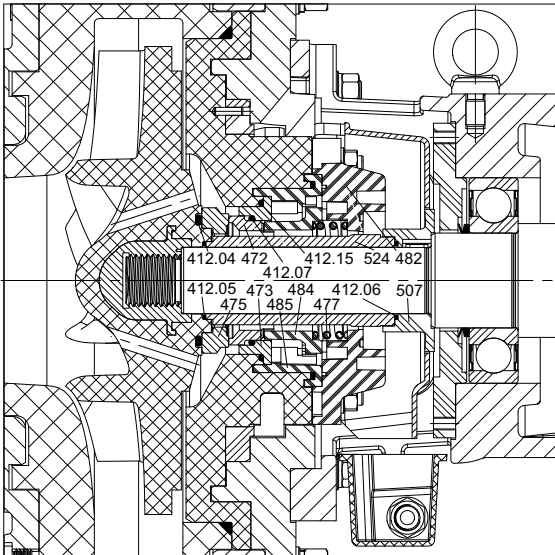


Fig. 10 Single-acting mechanical seal, type UV2

3.4.3 Double-acting STÜBBE mechanical seal, type UV3 / Metax G-SBA

- General-purpose chemical resistance
- Sturdy high-pressure spring double mechanical seal in REA version
- Up to 160 °C and up to 8 bar(g) inlet pressure
- Up to 16 bar(g) static pressure
- Identical stationary seal on the product side as for the single mechanical seal modular principle
- The high-end solution for highly critical applications (such as all cases where no blocking or flushing water may mix with the conveyed fluid)

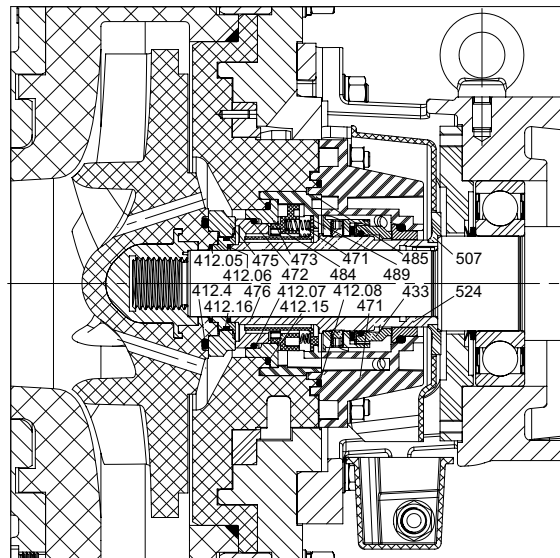




Fig. 11 Single-acting mechanical seal, type UV3

4 Transport, Storage and Disposal

4.1 Transport

 The user/owner is responsible for the transport of the pump.

 Weight specifications (→ documents for the particular order)

4.1.1 Unpacking and inspection on delivery

1. Unpack the pump/pump assembly upon delivery and inspect it for transport damage.
2. Check completeness and accuracy of delivery.
3. Ensure that the information on the name plate agrees with the order/design data.
4. Report any transportation damage to the manufacturer immediately.
5. Dispose of packaging material according to local regulations.

4.1.2 Lifting

 **DANGER**

Death or limbs crushed as a result transported items falling over!

- ▶ Use lifting gear appropriate for the total weight to be transported.
- ▶ Attach lifting gear in accordance with the following diagrams.
- ▶ Never use the lifting eye of the motor as the attachment point for lifting the entire pump (the lifting eye of the motor may be used for securing a pump assembly with a high center of gravity against being knocked over).
- ▶ Do not stand under suspended loads.
- ▶ Do not incline the pump more than 10°.

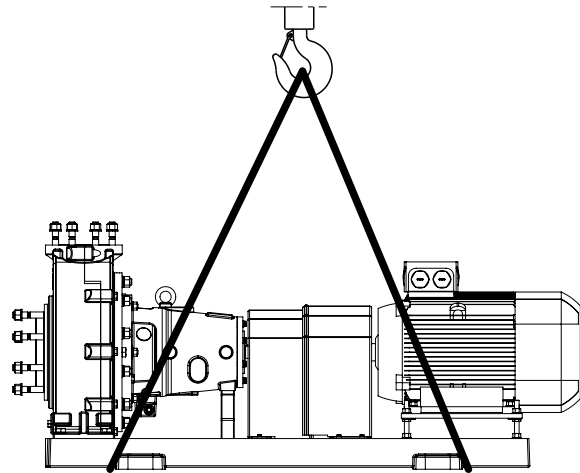


Fig. 12 Attaching lifting gear to the pump unit

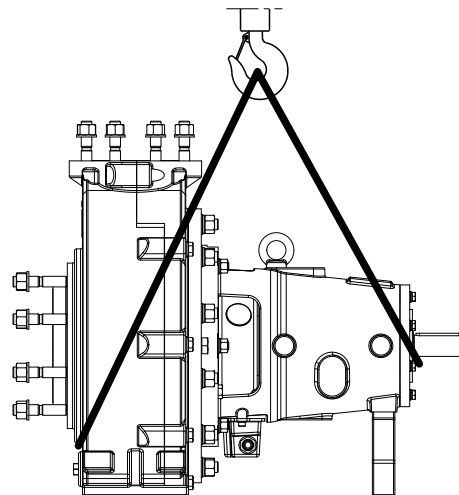


Fig. 13 Attach lifting gear to pump

1. Attach lifting gear in accordance with the following diagrams.
2. Lift the pump/pump assembly appropriately.


4.2 Storage

NOTE

Material damage due to inappropriate storage!

- ▶ Store the pump properly.
-
1. Seal all openings with blind flanges, blind plugs or plastic covers.
 2. Make sure the storage room meets the following conditions:
 - Dry
 - Frost-free
 - Vibration-free
 - UV protected
 3. Overrun shaft every three months.
 4. Make sure the shaft and bearing change their rotational position in the process.

4.3 Disposal


-  Plastic parts can be contaminated by poisonous or radioactive pumped liquids to such an extent that cleaning will be insufficient.

WARNING

Risk of poisoning and environmental damage by the pumped liquid or oil!

- ▶ Use personal protective equipment when carrying out any work on the pump.
 - ▶ Prior to the disposal of the pump:
 - Collect and damage any escaping pumped liquid or oil in accordance with local regulations.
 - Neutralize residues of pumped liquid in the pump.
 - ▶ Remove plastic parts and damage them in accordance with local regulations.
-
- ▶ Dispose of the pump in accordance with local regulations.

5 Installation and connection

 For pumps in potentially explosive atmospheres (→ ATEX additional manual).

NOTE

Material damage due to distortion or passage of electrical current in the bearing!

- ▶ Do not make any structural modifications to the pump assembly or pump casing.
- ▶ Do not carry out any welding work on the pump assembly or pump casing.

NOTE

Material damage caused by dirt!

- ▶ Do not remove the transport seals until immediately before installing the pump.
- ▶ Do not remove any covers or transport and sealing covers until immediately before connecting the pipes to the pump.

5.1 Preparing for installation

5.1.1 Check operating conditions


- ▶ Ensure the required operating conditions are met:
 - Resistance of body and seal material to the medium (→ resistance lists).
 - Required ambient conditions ([→ 9.2.1 Ambient conditions, Page 41](#)).
 - Operational limits ([→ 9.2.10 Operational limits, Page 49](#)).

5.1.2 Preparing the installation site

- ▶ Ensure the installation site meets the following conditions:
 - Pump is freely accessible from all sides
 - Sufficient space for the installation/removal of the pipes and for maintenance and repair work, especially for the removal and installation of the pump and the motor
 - Pump not exposed to external vibration (damage to bearings)
 - No corrosive exposure
 - Frost protection

5.1.3 Prepare foundation and surface

- ✓ Aids, tools, materials:
 - Steel shims
 - Spirit level

-  Installation options:
- With concrete foundation
 - With steel foundation frames
 - Without foundation

1. Ensure the foundation and surface meet the following conditions:
 - Level and horizontal
 - Clean (no oil, dust or other impurities)
 - Capable of bearing the weight of the pump assembly and all operating forces
 - Stability of the pump ensured
 - With concrete foundation: Normal concrete of strength class X0 in accordance with DIN EN 206
2. Clean pump sump carefully.

5.2 Installing with foundation


NOTE

Material damage due to distortion of base plate.

- ▶ Position the base plate as follows on the foundation and attach.

5.2.1 Place pump unit on the foundation

- ✓ Aids, tools, materials:
 - Anchor bolts
 - Steel shims
 - Mortar casting compound, no shrinkage
 - Spirit level
- 1. Lifting the pump unit (→ 4.1 Transport, Page 17).
- 2. Hook anchor bolts in the mounting holes on the base plate from below.

 Observe manufacturers information when using the fixing material.

- 3. Position the pump unit on the foundation. When doing so lower the anchor bolts into the prepared anchoring holes.

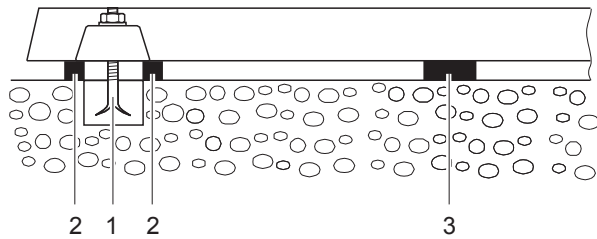



Fig. 14 Installation with foundation


- 4. Align the pump for height and system dimensions using steel shims as follows:
 - Arrange steel shims (2) to the left and right of each anchor bolt (1).
 - If the distance between the anchoring holes is > 750 mm, then arrange additional steel shims (3) on each side of the base plate in the center.
- 5. Ensure that the base plate lies flat against steel shims.
- 6. Check the permissible height deviation (1mm/m) using a mechanical spirit level in a longitudinal and a transverse direction
- 7. Repeat the procedure until the base plate is correctly aligned.

5.2.2 Attaching pump unit

 Filling the base plate with mortar casting compound improves dampening properties.

- 1. Fill the anchoring holes with mortar casting compound.
- 2. When the mortar casting compound has set, bolt the base plate at three points to the specified tightening torque.
- 3. Before tightening the remaining bolts, arrange shims next to every bolt to even out any irregularities in the mounting surface.

5.3 Installing without foundation

 Only allowed if pump is provided for installation without foundation (→ order data sheet).

Attachment methods must be designed so that undesirable displacement of the pump is prevented.

When installed on machine feet, the operational stability is achieved by the weight of the pump itself and the rigidity of the attached pipework. Pipework must be installed so that it is not stressed.

For a pump unit set up insulated, such as for an installation without foundation, provide separate earthing.

- ✓ Aids, tools, materials:
 - Impact wrench
 - Spirit level

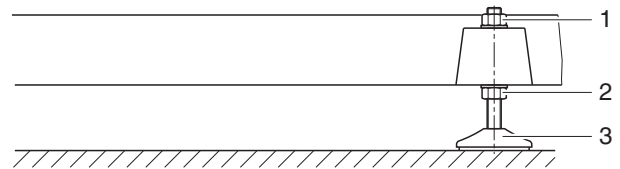



Fig. 15 Installation without foundation

- 1. Lifting the pump unit (→ 4.1.2 Lifting, Page 17).
- 2. Mount all leveling feet as illustrated.
- 3. Place pump unit on subsurface.
- 4. Set height of the base plate via leveling feet as illustrated above:
 - Use impact wrench to secure hexagonal bolt on leveling foot (3).
 - Undo the hexagon nut (1).
 - Set height by turning the hexagonal nut (2).
 - Tighten hexagonal nut (1).
 - Check the permissible height deviation (1mm/m) using a mechanical spirit level in a longitudinal and a transverse direction
 - Repeat the procedure until the base plate is correctly aligned.

5.4 Installing motor

 Only necessary if the pump unit is first assembled on site.

NOTE

Material damage through bangs and knocks!

- ▶ Do not bang and knock pump components.

1. Lift the motor on to the prepared position on the base plate.
2. Bolt the motor together with the base plate on the mounting area. Tighten the bolts finger-tight.

5.5 Install the coupling

The unit (motor/pump) is supplied with the coupling disassembled

DANGER

Danger to life from rotating parts.

- ▶ For all installation and maintenance work, disconnect the motor from the mains and secure against being switched back on again.

NOTE

If the motor was the wrong direction of rotation the impeller will come loose from the shaft!

The hydraulics may be damaged.


- ▶ When the pump unit is delivered, make sure the coupling is disassembled.
- ▶ Before installing the coupling, check with the coupling guard fitted that the direction of rotation of the motor is correct (→ 5.12.2 Check direction of rotation, Page 26).
- ▶ Install the coupling only when the direction of rotation of the motor is correct.

NOTE


Material damage through bangs and knocks!

- ▶ Do not tilt the coupling halves when slipping them on.
- ▶ Do not bang and knock pump components.

1. Removing the coupling guard (→ 5.8.1 Removing the coupling guard, Page 23).

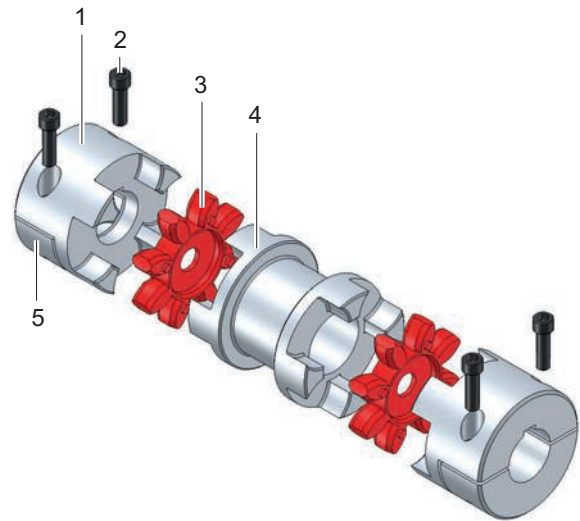


2. Remove the half shells (5) from the hub body (1).
3. Assemble together the hub body (1), gear ring (3) and intermediate piece (4).
4. Install the assembly with the half shells (5) on to the shaft ends of the motor and the pump.
5. Screw in the clamping screws (2) finger-tight until the hub (1) and half shells (5) lie on the shaft.

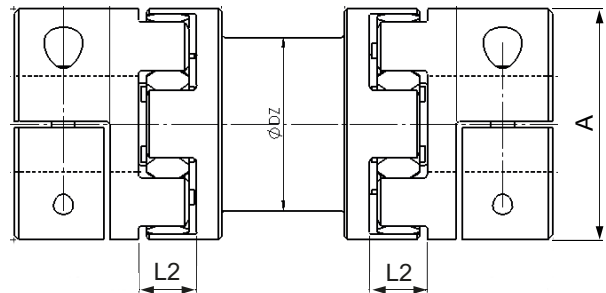

6. Move the clamping hub in the axial direction until the dimension L2 is reached (→ 9.2.4 Tolerance values for adjusting the coupling, Page 44).
7. Secure the clamping hub by tightening the clamping screws alternately. When doing so, comply with the correct torque TA (→ 9.2.4 Tolerance values for adjusting the coupling, Page 44).
8. Align the gear rings centrally between the clamp hubs and the intermediate piece. Ensure the dimension L2 is correct, so as to avoid damage.

5.6 Aligning motor

 The motor is factory-aligned to the pump. Check this before commissioning, and correct it if necessary.


NOTE

Material damage due to incorrect alignment of coupling.

► Align the motor exactly to the pump if there is any axial, radial or angular misalignment. For detailed information and special couplings: (→ manufacturer's data).

1. Align the motor so that the coupling halves align exactly. If necessary, proceed as follows:
 - Insert adjustment shims.
 - Use adjustment screws to set the height of the motor plate.
2. Tighten the motor bolts.
3. Aligning the coupling precisely (→ 5.7 Aligning the coupling precisely, Page 22).
4. If there is still any axial, radial or angular misalignment, repeat the procedure for aligning the motor.
5. Installing the coupling guard (→ 5.8.2 Installing the coupling guard, Page 23).

5.7 Aligning the coupling precisely

 Comply with the tolerance values for fine adjustment of the coupling (→ 9.2.4 Tolerance values for adjusting the coupling, Page 44).

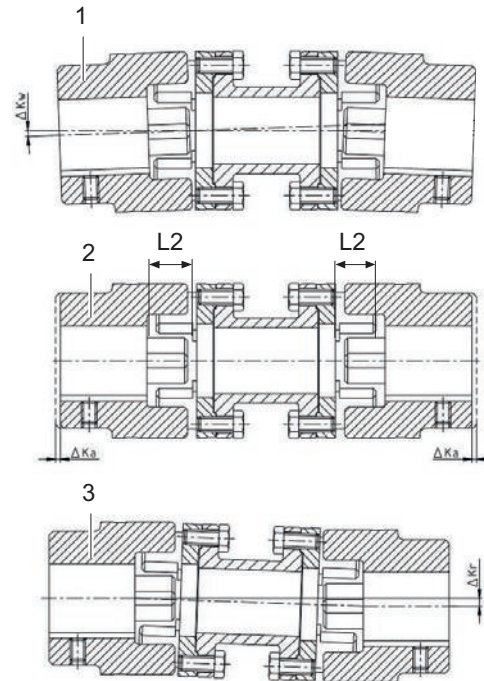


Fig. 16 Possible misalignments

- 1 Angular displacement
- 2 Axial displacement
- 3 Radial displacement

Angular misalignment

1. Determine the value ΔK_w .
2. Make sure that the determined value ΔK_w does not exceed the value $\Delta K_{w_{zul}}$.

Axial misalignment

3. Set the axial misalignment ΔK_a to a value within the permissible tolerance range of the dimension L_2 .

Radial misalignment

4. Determine the value ΔK_r .
5. Make sure that the determined value ΔK_r does not exceed the value $\Delta K_{r_{zul}}$.

5.8 Removal and installation of the coupling guard

⚠ DANGER

Risk of injury if the pump is operated without the coupling guard!

- ▶ Operate the pump exclusively with the coupling guard installed.
- ▶ Before removal / installation of the coupling guard, switch off the motor and secure it against being switched back on again.

The (heavy-duty) coupling guard consists of 2 parts.

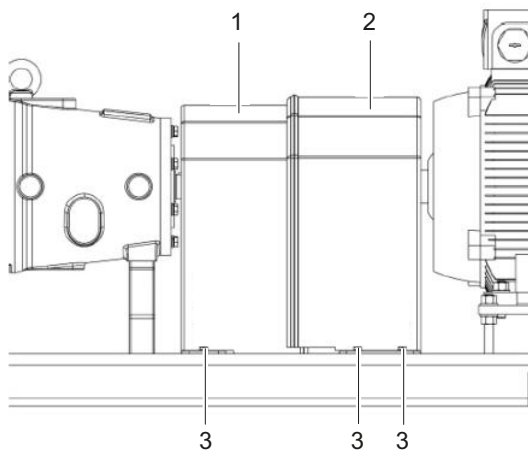


Fig. 17 Removal and installation of the coupling guard


- 1 Pump-side coupling guard
- 2 Motor-side coupling guard
- 3 Fixing screw

5.8.1 Removing the coupling guard

1. Remove the attachment screws (3).
2. Left off the pump-side coupling guard (1) and the motor-side coupling guard (2), and put them aside.
3. Screw in the attachment screws (3).

5.8.2 Installing the coupling guard

1. Remove the attachment screws (3).
2. Place the pump-side coupling guard (1) over the coupling.

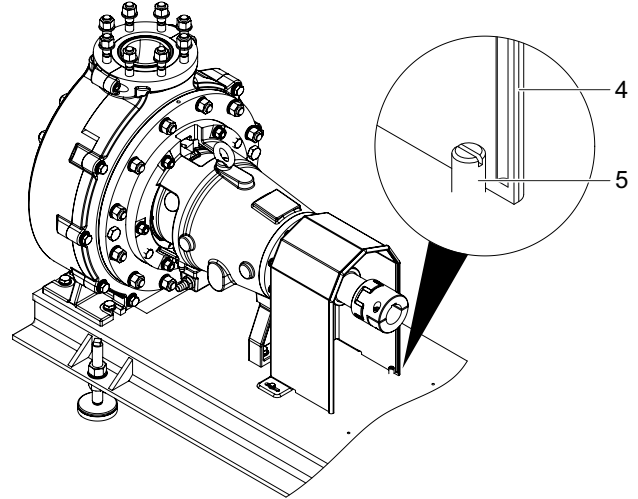

When doing so, make sure that the cheeks (4) of the coupling guard (open side) lie externally on the adjustment pins (5).

3. Place the motor-side coupling guard (2) over the coupling and install the pump-side coupling guard (1).
4. Align the two parts of the coupling guard so that area between the motor and the pump is completely covered by the coupling guard.
5. Screw in the attachment screws to a torque of 5 Nm.

5.9 Planning pipelines

i Water hammer may damage the pump or the system. Plan the pipes and fittings as far as possible to prevent water hammer occurring.

In order to avoid pressure shocks, using slow-closing fittings and install expansion joints or pulsation dampers.

5.9.1 Specifying supports and flange connections


NOTE

Material damage due to excessive forces and torques on the pump.

- ▶ Ensure pipe connection without stress.

1. Plan pipes safely:
 - No pulling or thrusting forces
 - No bending moments
 - Adjust for changes in length due to temperature changes (compensators, expansion shanks)
2. Support pipes in front of the pump.
3. Ensure the pipe supports have permanent low-friction properties and do not seize up due to corrosion.

5.9.2 Specifying nominal widths

 Keep the flow resistance in the pipes as low as possible.

1. Ensure nominal suction pipe width is not smaller than the nominal suction flange width.
 - Avoid flow velocities > 2 m/s.
 - Recommended flow velocity < 1 m/s
 - Maximum flow velocity = 9 m/s
2. Ensure the nominal pressure line width is not smaller than the nominal pressure flange width.
 - Avoid flow rate > 3 m/s in plastic pipes.
 - Recommended flow velocity < 3 m/s
 - Maximum flow velocity = 12 m/s
 - Install a vent valve, check valve and pressure gauge in pressure line just behind the discharge flange.

5.9.3 Specifying pipe lengths

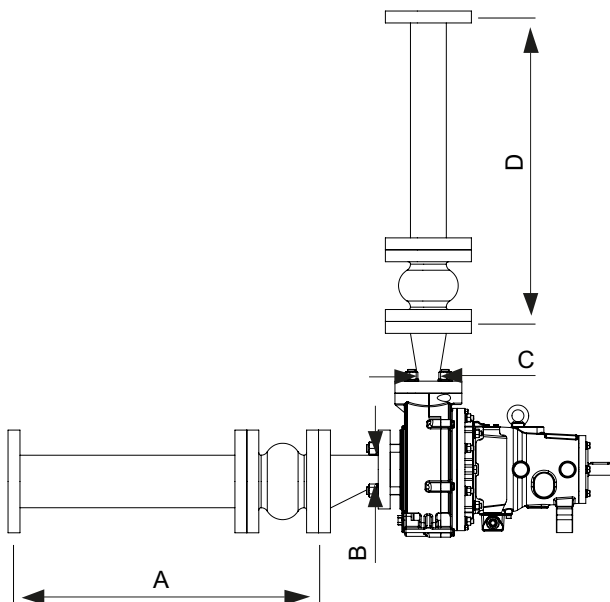



Fig. 18 Straight pipe lengths in front and after the pumps (recommended)


- A > 5x DN_s
- B DN_s
- C DN_d
- D > 5x DN_d

► Observe recommended minimum values when installing the pump.

 Suction side: Shorter lengths are possible, but may limit hydraulic performance data.

Pressure side: Shorter lengths are possible, but may result in increased noise development.

5.9.4 Provide self-priming container

 A self-priming container can be used to make the pump self-priming.

1. Select container volumes according to the size of the pump.
2. Clean containers carefully prior to commissioning or initial filling.

5.9.5 Optimizing changes of cross section and direction

1. Avoid radii of curvature of less than 1.5 times the nominal pipe diameter.
2. Avoid abrupt changes of cross-section along the piping.

5.9.6 Planning expansion joints

- ✓ Pipe diameter reducer installed with a smaller bore than the pump port
- Install expansion joints at the larger end of the pipe diameter reducer.

5.9.7 Planning a non-return valve

If the non-return valve is installed at a distance < 0.5 m from the discharge flange, air cushions can occur upstream of the non-return valve when the pump is being filled, which prevent a smooth start-up.

1. Install the non-return valve at a distance ≥ 0.5 m from the discharge flange, so that at start-up the pump can be correctly filled with the medium being conveyed.
2. To ensure suitable venting, install a bypass pipe with a shut-off valve at the non-return valve.

5.9.8 Planning venting facilities and pressure gauges

► Provide venting facilities and pressure gauges between the discharge flange of the pump and the first shut-off valve.

5.9.9 Discharging leaks

WARNING

Risk of injury and poisoning due to hazardous pumped liquids!

- ▶ Safely collect any leaking pumped liquid, then discharge and dispose of it in accordance with environmental regulations.

NOTE

Damage to the leakage tray by hazardous conveyed liquids!

- ▶ Make sure that the splash guard (clear PVC) and leakage tray (PE) are resistant to the conveyed liquids.
- ▶ If the splash guard (clear PVC) and leakage tray (PE) are not resistant to the conveyed liquids, reduce the maintenance intervals to suit the characteristics of the medium.

1. Connect the leakage tray to allow secure drainage of leaked medium.
2. Provide equipment for collecting and discharging leaking liquids.
3. Ensure the free discharge of leaking liquids.

5.9.10 Providing safety and control devices (recommended)


Avoid contamination

1. Install filters in the suction pipe.
2. Install a differential pressure gauge with contact manometer to monitor contamination.

Avoid reverse running

1. If a non-return valve is installed in the discharge pipework (close to the shut-off valve), make sure that the medium does not flow back after the pump is switched off.
2. In order to enable venting, include vent connection between discharge flanges and non-return valve.

Make provisions for isolating and shutting off the pipes

 For maintenance and repair work.

- ▶ Provide shut-off devices in the suction pipe and pressure line.


Allow measurements of the operating conditions

1. Provide pressure gauge in the suction pipe and pressure line for pressure measurement.
2. Provide motorside load monitors (over and underload).
3. Provide pressure measurement on the pump side.

Provide dry run protection


- ▶ In order to protect the pump from dry running and resulting damage
 - Provide dry run protection
 - e.g. STÜBBE PTM pressure and temperature monitoring sensor

Provide an overpressure protection

 Overpressure protection is required for operation in explosive areas (→ ATEX additional manual).

- ▶ Provide an overpressure protection.

5.10 Connecting the pipes

 Max. connection loads as per API610.

NOTE

Material damage due to excessive forces and torques on the pump.

- ▶ Ensure pipe connection without stress.

5.10.1 Keeping the piping clean


NOTE

Material damage due to impurities in the pump!

- ▶ Make sure no impurities can enter the pump.

1. Clean all piping parts and fittings prior to assembly.
2. Flush all pipes carefully with neutral medium.
3. Ensure no flange seals protrude inwards.
4. Remove any blind flanges, plugs, protective foils and/or protective paint from the flanges.

5.10.2 Installing auxiliary pipes

 Observe manufacturer information for any auxiliary systems present.

1. Connect the auxiliary pipes to the auxiliary connections so that they are stress-free and do not leak.
2. Avoid formation of air pockets: Run the pipes with a continuous slope up to the pump.

5.10.3 Installing the suction pipework

1. Remove the transport and sealing covers from the pump.
2. Fit suction pipe stress-free and sealed. ([→ 9.2.5 Flange tightening torques, Page 45](#)).
3. Ensure no seals protrude inwards.
4. During suction operation, proceed as follows:
 - As far as possible, avoid installing a foot valve in the suction pipework
 - Installation of a separate evacuation device or self-priming container with a non-return valve in the discharge pipework is recommended

5.10.4 Installing the pressure pipe

1. Remove the transport and sealing covers from the pump.
2. Fit the pressure line stress-free and sealed ([→ 9.2.5 Flange tightening torques, Page 45](#)).
3. Ensure no seals protrude inwards.

5.10.5 Inspection for stress-free pipe connections

- ✓ Piping installed and cooled down
1. Disconnect the pipe connecting flanges from the pump.
 2. Check whether the pipes can be moved freely in all directions within the expected range of expansion:
 - Nominal width < 150 mm: by hand
 - Nominal width > 150 mm: with a small lever
 3. Make sure the flange surfaces are parallel.
 4. Reconnect the pipe connecting flanges to the pump.
 5. If present, check support foot for stress.

5.11 Planning the electrical system

- ▶ Ensure the following in the electrical supply to the pump unit:
 - Provide a device for isolating from the power supply.
 - The device for isolating from the power supply must be capable of their actuated during normal operation and also in an emergency (emergency stop switch). The emergency stop switch must satisfy ISO 13850.
 - If the pump unit stops due to a power failure it must be protected against automatic restarting (on restoration of power).
 - Install a motor protection switch to act as a cut-out in the event of overheating and adjust it in accordance with the particulars on the motor nameplate.
 - Connect PTC (thermistors) in the motors to the motor protection switches.
 - If a frequency inverter is to be used at low speeds, check whether an external cooler may be necessary.
 - The encapsulation of the control systems must satisfy the protection classes specified in EN 60529.


5.12 Electrical connection

DANGER

Risk of electrocution!

- ▶ All electrical work must be carried out only by qualified electricians.
- ▶ Before all work on the electrical system, disconnect the motor from the mains and secure against being switched back on again.

5.12.1 Connecting the motor

 Follow the instructions of the motor manufacturer.

1. Connect the motor according to the connection diagram.
2. Make sure no danger arises due to electric power.
3. Install an EMERGENCY STOP switch.

5.12.2 Check direction of rotation

DANGER

Danger to life from rotating parts.


- ▶ Use personal protective equipment when carrying out any work on the pump.
- ▶ Maintain an adequate distance from rotating parts.
- ▶ Check the direction of rotation only when the coupling guard is installed.

NOTE

Material damage can be caused by wrong direction of rotation!

- ▶ Make sure that the motor is disconnected from the pump and the coupling is removed..
1. Switch on motor for max. 2 seconds and switch it off again immediately.
 2. Check whether the sense of rotation of the motor matches the direction of rotation on the fan impeller.
 3. If the sense of rotation is different: change over the two phases ([→ 5.12 Electrical connection, Page 26](#)).
 4. Installing the coupling ([→ 5.5 Install the coupling, Page 21](#)).

5.13 Performing the hydrostatic test

 Only necessary if the entire system needs to be tested under pressure.

NOTE


Material damage due to bursting of pump casing.

- ▶ Testing pressure must not exceed the permissible pump pressure (→ documents for the particular order).
- ▶ Make sure the testing pressure does not exceed the permissible pump pressure.
 - If necessary, do not perform pressure test on the pump.

Mechanical seal	Test pressure max.
Single-acting STÜBBE PTFE bellows-type mechanical seal	4 Bar
UV2	8 Bar
UV3	8 Bar

Tab. 3 Pressure test

6 Operation


 For pumps in potentially explosive atmospheres (→ ATEX additional manual).

6.1 Preparing for commissioning

6.1.1 Check downtimes

- ▶ Check downtimes (→ [6.4 Restoring the pump to service, Page 29](#)).

6.1.2 Lubricate an oil-lubricated pump with oil

 Oil-lubricated pumps are supplied from the manufacturer unlubricated.

- ▶ Lubricate the bearing housing with oil (→ [Oil-lubricated bearings, Page 32](#)).

6.1.3 Filling and bleeding

WARNING

Risk of injury and poisoning due to hazardous pumped liquids!

- ▶ Use protective equipment for any work on the pump.
- ▶ Safely collect the fluid and dispose of it in accordance with environmental regulations.


NOTE

Material damage as a result of dry running

- ▶ Make sure the pump is filled properly.

1. If present, fill and vent self-priming container with fluid.
2. Open the suction-side fitting.
3. Open the pressure-side fitting.
4. Fill pump and suction pipe with fluid.
5. Verify that no pipe connections are leaking.

6.1.4 Preparing auxiliary systems (if present)

 The manufacturer accepts no liability for damage arising due to the installation or use of a third party or non-approved auxiliary system.

Sealing systems

1. Ensure that the sealing medium is appropriate to mix with the pumped medium.
2. Ascertain the sealing system (→ order-specific documentation).
3. Installing the sealing system (→ manufacturer's information).

4. Ensure the necessary parameters for the sealing system (→ manufacturer information).
5. Ensure that the container pressure is not lower than that permitted for blocking pressure systems (→ manufacturer information).

6.2 Commissioning

6.2.1 Switching on

- ✓ Pump set up and connected properly
- ✓ Check direction of rotation
- ✓ Coupling and coupling guard installed
- ✓ Motor set up and connected properly
- ✓ Align motor precisely to the pump
- ✓ All connections stress-free and sealed
- ✓ All safety equipment installed and tested for functionality
- ✓ Pump prepared, filled and vented correctly
- ✓ Auxiliary systems switched on if present

DANGER

Risk of injury due to running pump!

- ▶ Do not touch the pump when it is running.
- ▶ Ensure that the coupling guard is attached.
- ▶ Do not carry out any work on the pump when it is running.
- ▶ Allow the pump to cool down completely before starting any work.

DANGER

Risk of injury and poisoning due to pumped liquid spraying out!

- ▶ Use personal protective equipment when carrying out any work on the pump.

NOTE

Risk of cavitation if suction flow is restricted!

- ▶ Open the suction-side fitting and do not use it to regulate the flow.
- ▶ Do not open the pressure-side fitting beyond the operating point.

NOTE

Material damage due to overheating.

- ▶ Do not operate the pump for long periods with the pressure-side fitting closed.
- ▶ Observe the minimum flow rate (→ [Table 25 Volumetric flow of liquid medium, Page 49](#)).

NOTE

Material damage as a result of dry running

- ▶ Ensure that the pump is properly filled and ventilated.
1. Turn on auxiliary systems (if present).
 2. Open the suction-side fitting.
 3. Close the pressure-side fitting.
 4. Switch on the motor and check it for smooth running.
 5. Once the motor has reached its nominal speed, open the pressure-side fitting slowly until the operating point is reached.
 6. After the initial stress due to the pressure and operating temperature, check that the pump is not leaking.

6.2.2 Switching off

- ✓ Pressure-side fitting closed (recommended)

⚠ WARNING

Risk of injury due to hot pump parts!

- ▶ Use personal protective equipment when carrying out any work on the pump.
1. Switch off motor.
 2. Check all connecting bolts and tighten them if necessary (only after initial commissioning).

6.3 Shutting down the pump

⚠ DANGER

Risk of injury due to running pump!

- ▶ Do not touch the pump when it is running.
- ▶ Do not carry out any work on the pump when it is running.
- ▶ Before all installation and maintenance work, disconnect the motor from the mains and secure it against being switched back on again.

⚠ DANGER

Risk of electrocution!

- ▶ All electrical work must be carried out only by qualified electricians.
- ▶ Before all work on the electrical system, disconnect the motor from the mains and secure against being switched back on again.

⚠ WARNING

Risk of injury and poisoning due to hazardous pumped liquids!

- ▶ Use protective equipment for any work on the pump.
- ▶ Collect leaking liquid safely and damage fitting in accordance with local regulations.

- ▶ Take the following measures whenever the pump is shut down:

Pump is	Action
shut down	▶ Take measures appropriate for the fluid (→ Table 5 Measures depending on the behavior of the pumped liquid, Page 29).
...emptied	▶ Close suction and pressure-side fitting.
...dis-mounted	▶ Isolate the motor from its power supply and secure it against unauthorized switch-on.
...put into storage	▶ Note measures for storage (→ 4.2 Storage, Page 18).

Tab. 4 Measures to be taken if the pump is shut down


Behavior of the pumped liquid	Duration of shutdown (depending on process)	
	Short	Long
Crystallized or polymerized, sedimentation of solids	▶ Flush the pump.	▶ Flush the pump.
Solidifying/ freezing, non-corrosive	▶ Heat up or empty the pump and containers.	▶ Empty the pump and containers.
Solidifying/ freezing, corrosive	▶ Heat up or empty the pump and containers.	▶ Empty the pump and containers.
Remains liquid, non-corrosive	–	–
Remains liquid, corrosive	–	▶ Empty the pump and containers.


Tab. 5 Measures depending on the behavior of the pumped liquid

6.4 Restoring the pump to service


1. Complete all steps as for commissioning (→ [6.2 Commissioning, Page 28](#)).
2. If the pump is shut down for over 1 year, replace elastomer seals (O-rings, shaft sealing rings).
3. For breaks in operations > 2 years, replace bearing lubricant and check mechanical seal.
4. For breaks in operations > 2 years in dry climates change the elastomer bellows (if selected) because of deteriorating elasticity

7 Maintenance

 For pumps in potentially explosive atmospheres (→ ATEX additional manual).

 Trained service technicians are available for fitting and repair work. Submit evidence of conveyed medium on request (DIN safety data sheet or safety certificate).

7.1 Inspections

 The inspection intervals depend on the operational strain on the pump.

DANGER

Risk of injury due to running pump!

- ▶ Do not touch the pump when it is running.
- ▶ Do not carry out any work on the pump when it is running.

WARNING

Risk of injury and poisoning due to hazardous pumped liquids!

- ▶ Use personal protective equipment when carrying out any work on the pump.

1. Check at appropriate intervals:
 - Adherence to the minimum flow rate (→ [Table 25 Volumetric flow of liquid medium, Page 49](#)).
 - Normal operating conditions unchanged
 - Alignment of coupling and condition of elastic elements
2. For trouble-free operation, always ensure the following:
 - No dry running
 - No leaks
 - No cavitation
 - Suction side open gate valves
 - Free and clean filters
 - Sufficient pump inlet pressure
 - No unusual running noises or vibrations
 - No parting of magnetic coupling

7.2 Servicing

DANGER

Risk of injury due to running pump!

- ▶ Do not touch the pump when it is running.
- ▶ Do not carry out any work on the pump when it is running.
- ▶ For all installation and maintenance work, disconnect the motor from the mains and lock.

DANGER

Risk of electrocution!

- ▶ All electrical work must be carried out only by qualified electricians.

WARNING

Risk of injury and poisoning due to hazardous or hot fluid!

- ▶ Use protective equipment for any work on the pump.
- ▶ Allow the pump to cool down completely before commencing any work.
- ▶ Make sure the pump is depressurized.
- ▶ Empty the pump, safely collect the pumped liquid and damage it in accordance with environmental rules and requirements.


7.2.1 Maintenance in accordance with maintenance schedule

- ▶ Perform maintenance work in accordance with the maintenance schedule.

Designation	Interval	Maintenance
Pump assembly	daily	<ul style="list-style-type: none"> ▶ Check for increased noise development. ▶ Check for vibration. ▶ Pay attention to increased current consumption of the motor. ▶ Check that the anchor bolts are correctly seated. ▶ Check for oxidation. ▶ Check for leakage and crystallization. ▶ Check the leakage tray and splash guard. ▶ If leakage occurs, exchange defective parts immediately. <ul style="list-style-type: none"> – Mechanical seal (→ other applicable documents).
Self priming container (if present)	daily	▶ Check filling level.
Blocking pressure system (if present)	daily	▶ Check.
Leakage tray	daily	▶ If the splash guard and leakage tray are not resistant to the medium, check for leakage.
	weekly	▶ Check for leaking pumped liquid.
Undoable screwed connections	weekly	▶ Check for tight fitting.
Elastic intermediate ring coupling	3 months after commissioning	▶ Check
	every 12 months	
Oil (only for oil-lubricated bearings)	Yearly	▶ Change the oil (→ Oil-lubricated bearings, Page 32).
Mechanical seals		▶ Check for leakage and replace it necessary.
Sealed-for-life roller bearings		▶ Check for increased noise and vibration, replace it necessary (→ 7.3 Dismounting, Page 33).
Pump assembly	as required	▶ Cleaning (→ 7.2.3 Cleaning the pump, Page 32).

Tab. 6 Maintenance schedule

7.2.2 Lubricate bearings


 Use suitable lubricants (→ 9.2.8 Lubricant, Page 46).

Grease-lubricated bearings

NOTE

Over-greased bearings may overheat!

- ▶ Do not grease the bearings before commissioning. The bearings have been correctly greased by the manufacturer.
- ▶ Comply with the correct lubricant quantities and do not exceed the lubricant quantities (→ 9.2.7 Lubrication, Page 46).

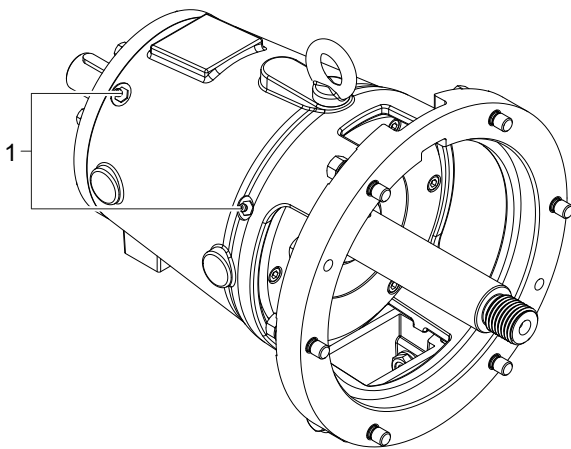

1. Apply a grease gun to the grease nipples (1).
2. Fill the grease chambers one third with grease. Comply with the manufacturer's stated lubricant quantities (→ 9.2.7 Lubrication, Page 46).
3. Remove the grease gun.


Oil-lubricated bearings

NOTE

The pump is delivered without a filling of oil!

Bearings may be damaged due to lack of oil lubrication or incorrect oil lubrication.

- ▶ Before commissioning, lubricate the bearing housing with oil.
- ▶ Comply with the correct lubricant quantities and do not exceed the lubricant quantities (→ 9.2.7 Lubrication, Page 46).

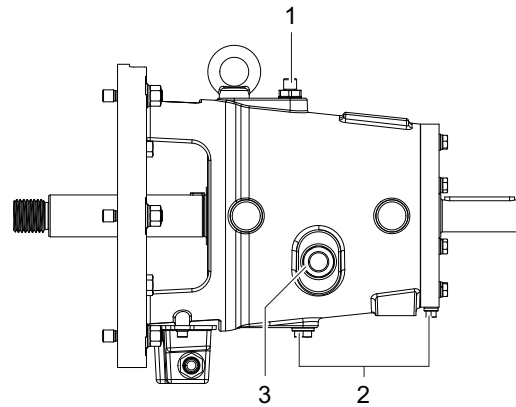

1. Remove the screw (1) from the filler opening.
2. To change the oil, proceed as follows:
 - Remove the screw plugs (2) and fully drain the oil into a collection vessel.
 - Screw in the screw plugs.
3. Fill the bearing housing with oil until the oil level reaches the center of the oil sight glass (3). Comply with the manufacturer's stated lubricant quantities (→ 9.2.7 Lubrication, Page 46).
4. Screw the screw into the filler opening.

7.2.3 Cleaning the pump

NOTE

High water pressure or spray water can damage bearings!

- ▶ Do not clean bearing areas with a water or steam jet.
- ▶ Clean large-scale grime from the pump.

7.3 Dismounting

DANGER

Risk of injury due to running pump!

- ▶ Do not touch the pump when it is running.
- ▶ Do not carry out any work on the pump when it is running.
- ▶ Before all installation and maintenance work, disconnect the motor from the mains and secure it against being switched back on again.

DANGER

Risk of electrocution!

- ▶ All electrical work must be carried out only by qualified electricians.
- ▶ Before all work on the electrical system, disconnect the motor from the mains and secure against being switched back on again.

WARNING

Risk of injury and poisoning due to hazardous or hot fluid!

- ▶ Use personal protective equipment when carrying out any work on the pump.
- ▶ Allow the pump to cool completely before commencing any work.
- ▶ Make sure the pump is depressurized.
- ▶ Empty the pump, safely collect the pumped liquid and damage it in accordance with environmental rules and requirements.

WARNING

Risk of injury due to heavy components!

- ▶ Pay attention to the component weight. Lift and transport heavy components using suitable lifting gear.
- ▶ Set down components safely and secure them against overturning or rolling away.

WARNING

Risk of injury during disassembly!

- ▶ Secure the pressure-side gate valve against accidental opening.
- ▶ Depressurize the blocking pressure system, if available.
- ▶ Wear protective gloves, components can become very sharp-edged due to wear or damage.
- ▶ Remove spring-loaded components carefully (e.g. mechanical seal, stressed bearing, valves etc.), as components can be ejected by the spring stress.
- ▶ Observe the manufacturer's specifications (e.g. for the motor, coupling, mechanical seal, blocking pressure system, cardan shaft, drives, belt drive etc.).

NOTE

Material damage due to incorrect dismounting/installation of the pump.

- ▶ Only specialist mechanics should complete dismounting/installation work.

7.3.1 Preparations for dismounting

- ✓ Pump is depressurized
- ✓ Pump completely empty, flushed and decontaminated
- ✓ Electrical connections disconnected and motor secured against switch-on
- ✓ Pump cooled down
- ✓ Coupling guard removed
- ✓ For a coupling with spacer piece: remove distance piece
- ✓ Pressure gauge lines, pressure gauge and fixtures dismounted
- ✓ Remove existing flushing supply or blocking pressure lines

NOTE

Material damage, fragile components.

- ▶ Dismount ceramic parts of the plain bearing with care, do not hit or knock.


1. Dismantle the pipes on the suction and pressure side.
2. Remove pump from the system.
3. When dismounting, observe the following:
 - Mark the precise orientation and position of all components before dismounting them.
 - Dismount components concentrically without canting.

7.4 Replacement parts and return

1. Have the following information ready to hand when ordering spare parts
 - Device type
 - ID number
 - Nominal pressure and diameter
 - Connection and gasket material
2. Please complete and enclose the document of compliance for returns
(→ www.stuebbe.com/en/service/downloads).



8 Troubleshooting

 For pumps in potentially explosive atmospheres (→ ATEX additional manual).

If faults occur which are not specified in the following table or cannot be traced back to the specified causes, please consult the manufacturer.

Possible faults are identified by a fault number in the table below. This number identifies the respective cause and remedy in the troubleshooting list.

Fault	Number
Pump not pumping	1
Pumping rate insufficient	2
Pumping rate excessive	3
Pumping pressure insufficient	4
Pumping pressure excessive	5
Pump running roughly / pump running noisily / high bearing temperature	6
Pump leaks	7
Excessive motor power uptake	8

Tab. 7 Fault/number assignment

Fault number								Possible cause	Remedy
1	2	3	4	5	6	7	8		
X	-	-	-	-	-	-	-	Intake / suction pipe and/or pressure line closed by fitting	▶ Open the fitting.
X	-	-	-	-	-	-	-	Pump shaft fractured	▶ Repair the pump. ▶ Check the operating conditions.
X	-	-	-	-	-	-	-	Transport and sealing cover still in place	▶ Remove the transport and sealing cover. ▶ Dismount the pump and inspect it for dry-running damage.
X	-	-	-	-	-	-	-	Self-priming container empty / fluid level below the suction pipe intake	▶ Fill the container. ▶ Dismount the pump and inspect it for dry-running damage. ▶ Install monitoring devices.
X	X	-	-	-	-	-	-	Fluid level at inlet too low (pump drawing in air / discontinuous flow)	▶ Dismount the pump and inspect it for dry-running damage. ▶ Install monitoring devices (level sensing cut-off).
X	X	-	X	-	-	-	-	Motor speed too low	▶ Compare the required motor speed with the specifications on the pump type plate. Replace the motor if necessary. ▶ Increase the motor speed if speed control is available.
X	X	-	X	-	X	-	-	Intake / suction pipe inlet, pump or coarse filter / filter clogged or encrusted	▶ Clean the intake / suction pipe inlet, pump or coarse filter / filter
X	X	-	X	-	X	-	-	Air is sucked in	▶ Seal the defective point in the pipework.

Fault number								Possible cause	Remedy
1	2	3	4	5	6	7	8		
X	X	-	X	-	X	-	-	Proportion of gas too high: pump is cavitating	► Consult the manufacturer.
X	X	-	X	-	X	-	-	Pump running in the wrong direction	► Change over any two phases in the motor.
X	X	-	X	-	X	-	-	Impeller out of balance or blocked	► Dismount the pump and inspect it for dry-running damage. ► Clean the impeller.
X	X	-	-	X	X	-	-	Pressure pipe blocked	► Clean the pressure pipe.
X	-	-	X	-	-	X	-	Damage due to accumulated medium in pump operation („stewing in its own juice“)	► Repair the pump. ► Check the discharge side (check valve) fittings and discharge pipework / filter for blockages, and resolve the defect.
X	-	-	X	-	-	X	-	Damage due to accumulated medium in pump operation („stewing in its own juice“), because the static delivery height is not being achieved by the pump	► Adapt the pump to the operating conditions.
X	-	-	-	-	X	-	-	Intake/suction pipe and pump not correctly vented or not completely filled	► Completely fill and vent pump and/or pipe.
X	-	-	-	-	X	-	-	Intake / suction pipe contains trapped air (Cessation of flow due to airlock)	► Install fitting for venting. ► Adjust piping installation.
-	X	-	X	-	-	-	-	Intake / suction pipe not completely open	► Open the fitting.
-	X	-	X	-	-	-	-	Geodetic differential head and/or pipe flow resistances too high	► Remove sediments from the pump and/or pressure pipe. ► Install a larger impeller and consult the manufacturer.
-	X	-	X	-	X	-	-	Cross section of intake / suction pipe too narrow	► Increase cross section. ► Clean encrustation from suction pipe. ► Fully open fitting.
-	X	-	X	-	X	-	-	Suction head too large: $NPSH_{pump}$ is larger than $NPSH_{system}$	► Increase pump inlet pressure. ► Consult the manufacturer.
-	X	-	X	-	X	-	-	Back pressure of the system is too high, pump selected is too small.	► Discuss with the manufacturer the operating conditions / adjust the pump
-	X	-	X	-	X	-	-	Temperature of fluid is too high: pump is cavitating	► Increase pump inlet pressure. ► Lower temperature. ► Contact the manufacturer.
-	X	-	X	-	X	-	-	Pump parts worn	► Replace the worn pump parts.
-	X	-	X	-	X	-	-	Hydraulic parts of the pump dirty, clotted or encrusted	► Dismount the pump. ► Clean the parts.
-	X	-	X	-	X	-	X	Motor running on 2 phases	► Check the fuse and replace it if necessary. ► Check the cable connections and insulation.
-	X	-	X	-	-	-	X	Viscosity or specific gravity of the pumped liquid outside the range specified for the pump	► Consult the manufacturer.
-	X	-	-	X	X	-	-	Pressure-side fitting not opened wide enough	► Open the pressure-side fitting.

Fault number								Possible cause	Remedy
1	2	3	4	5	6	7	8		
-	-	X	X	-	X	-	X	Pressure-side fitting opened too wide	<ul style="list-style-type: none"> ▶ Throttle down the flow rate at the pressure-side fitting. Observe the minimum flow rate (→ Table 25 Volumetric flow of liquid medium, Page 49). ▶ Machine the impeller down. Consult the manufacturer and adjust the impeller diameter.
-	-	X	-	X	-	-	-	Viscosity lower than expected	<ul style="list-style-type: none"> ▶ Machine the impeller down. Consult the manufacturer and adjust the impeller diameter.
-	-	X	-	X	X	-	X	Motor speed too high	<ul style="list-style-type: none"> ▶ Compare the required motor speed with the specifications on the pump type plate. Replace the motor if necessary. ▶ Reduce the motor speed if speed control is available.
-	-	X	-	X	X	-	X	Impeller diameter too large	<ul style="list-style-type: none"> ▶ Throttle down the flow rate at the pressure-side fitting. Observe the minimum flow rate (→ Table 25 Volumetric flow of liquid medium, Page 49). ▶ Machine the impeller down. Consult the manufacturer and adjust the impeller diameter.
-	-	X	-	-	X	-	X	Geodetic differential head, pipe flow resistances and/or other resistances lower than specified	<ul style="list-style-type: none"> ▶ Throttle down the flow rate at the pressure-side fitting. Observe the minimum flow rate (→ Table 25 Volumetric flow of liquid medium, Page 49). ▶ Machine the impeller down. Consult the manufacturer and adjust the impeller diameter.
-	-	-	-	X	-	-	-	Flow falls below minimum	<ul style="list-style-type: none"> ▶ Increase flow to minimum flow (→ Table 25 Volumetric flow of liquid medium, Page 49).
-	-	-	-	X	X	-	X	Defective antifriction bearing in bearing carrier	<ul style="list-style-type: none"> ▶ Replace antifriction bearing
-	-	-	-	-	X	-	-	Pump is conveying in part-load or overload range (increased axial forces / radial forces)	<ul style="list-style-type: none"> ▶ Operate the pump in the reliable operating range.
-	-	-	-	-	X	-	-	Coupling packages worn / motor misaligned	<ul style="list-style-type: none"> ▶ Replace coupling packages and realign.
-	-	-	-	-	X	-	-	Lubricant: too much, too little or unsuitable	<ul style="list-style-type: none"> ▶ Reduce, add to or replace lubricant.
-	-	-	-	-	X	X	X	Pump distorted	<ul style="list-style-type: none"> ▶ Check the pipe connections and pump attachment. ▶ Check alignment of coupling. ▶ Check attachment of the support foot.
-	-	-	-	-	X	-	X	Increased friction due to damage to the pump (foreign bodies)	<ul style="list-style-type: none"> ▶ Repair the pump.
-	-	-	-	-	-	X	-	Material-dependent media temperature too high	<ul style="list-style-type: none"> ▶ Repair the pump. ▶ Select the pump material in discussions with the manufacturer.

Fault number								Possible cause	Remedy
1	2	3	4	5	6	7	8		
-	-	-	-	-	-	X	-	Medium temperature too close to boiling point (single-acting mechanical seal running hot)	<ul style="list-style-type: none"> ▶ Repair the pump. ▶ Modify the single-acting mechanical seal in consultation with the manufacturer so that it operates with continuous flushing/quenching, or convert it to a double-acting mechanical seal.
-	-	-	-	-	-	X	-	Mechanical seal worn	<ul style="list-style-type: none"> ▶ Replace mechanical seal ▶ Check pumped medium.
-	-	-	-	-	-	X	-	Connecting bolts not correctly tightened	<ul style="list-style-type: none"> ▶ Tighten the connecting bolts.
-	-	-	-	-	-	X	-	Faulty housing seal	<ul style="list-style-type: none"> ▶ Replace the housing seal
-	-	-	-	-	-	-	X	Defective antifriction bearing in motor	<ul style="list-style-type: none"> ▶ Replace the antifriction bearing (→ manufacturer's specifications).
-	-	-	-	-	-	-	X	Increase friction at a double-acting mechanical seal	<ul style="list-style-type: none"> ▶ Check the locking pressure and agree it with the manufacturer. ▶ Check the seal for wear and correct installation.

Tab. 8 Troubleshooting list

9 Appendix

9.1 Replacement parts

9.1.1 Part no. and description

Part no.	Designation
102	Volute casing
155.1	Reinforced casing
155.2	Reinforced casing
183	Support foot
210	Drive shaft
233	Reverse-action wheel
321	Radial ball bearing
330	Bearing bracket
344	Bearing carrier support stand
360	Bearing cap, pump side
361	Bearing cap, motor side
412.01	O-ring
412.02	O-ring
412.03	O-ring
412.04	O-ring
412.05	O-ring
412.06	O-ring
412.07	O-ring
412.08	O-ring
412.19	O-ring
412.23	O-ring
420.1	Shaft seal
420.2	Shaft seal
421.24	O-ring
443	Sealing insert
463	Splash guard
472	Rotating seal ring
474	Reaction ring
475	Stationary seal ring
477	Spring
481	Bellows
482	Gaiter bearer
506.1	Retaining ring
507	Liquid splash ring

Part no.	Designation
524	Shaft sleeve
554.1	Washer
554.2	Washer
554.4	Washer
554.5	Washer
554.6	Washer
554.7	Washer
558.4	Spring ring
558.5	Spring ring
558.6	Spring ring
558.8	Spring ring
580.1	Cap
591	Drip tray
900.14	Screw
900.35	Ring screw
901.3	Hexagon head bolt
901.41	Hexagon head bolt
901.51	Hexagon head bolt
902.1	Stud bolt
902.2	Stud bolt
902.4	Stud bolt
902.5	Stud bolt
902.8	Stud bolt
903.25	Plug screw
912.3	Plug screw
920.1	nut
914.7	Cylinder screw
914.9	Cylinder screw
914.10	Cylinder screw
914.12	Cylinder screw
914.26	Cylinder screw
914.31	Cylinder screw
920.2	nut
920.1	Hexagon nut
920.2	Hexagon nut
920.4	Hexagon nut
920.5	Hexagon nut

Part no.	Designation
920.25	Hexagon nut
921	Slotted nut
931	Locking plate
932	Circlip
940.1	Key
940.2	Key

Tab. 9 Designation of components according to part numbers

9.1.2 Sectional drawing

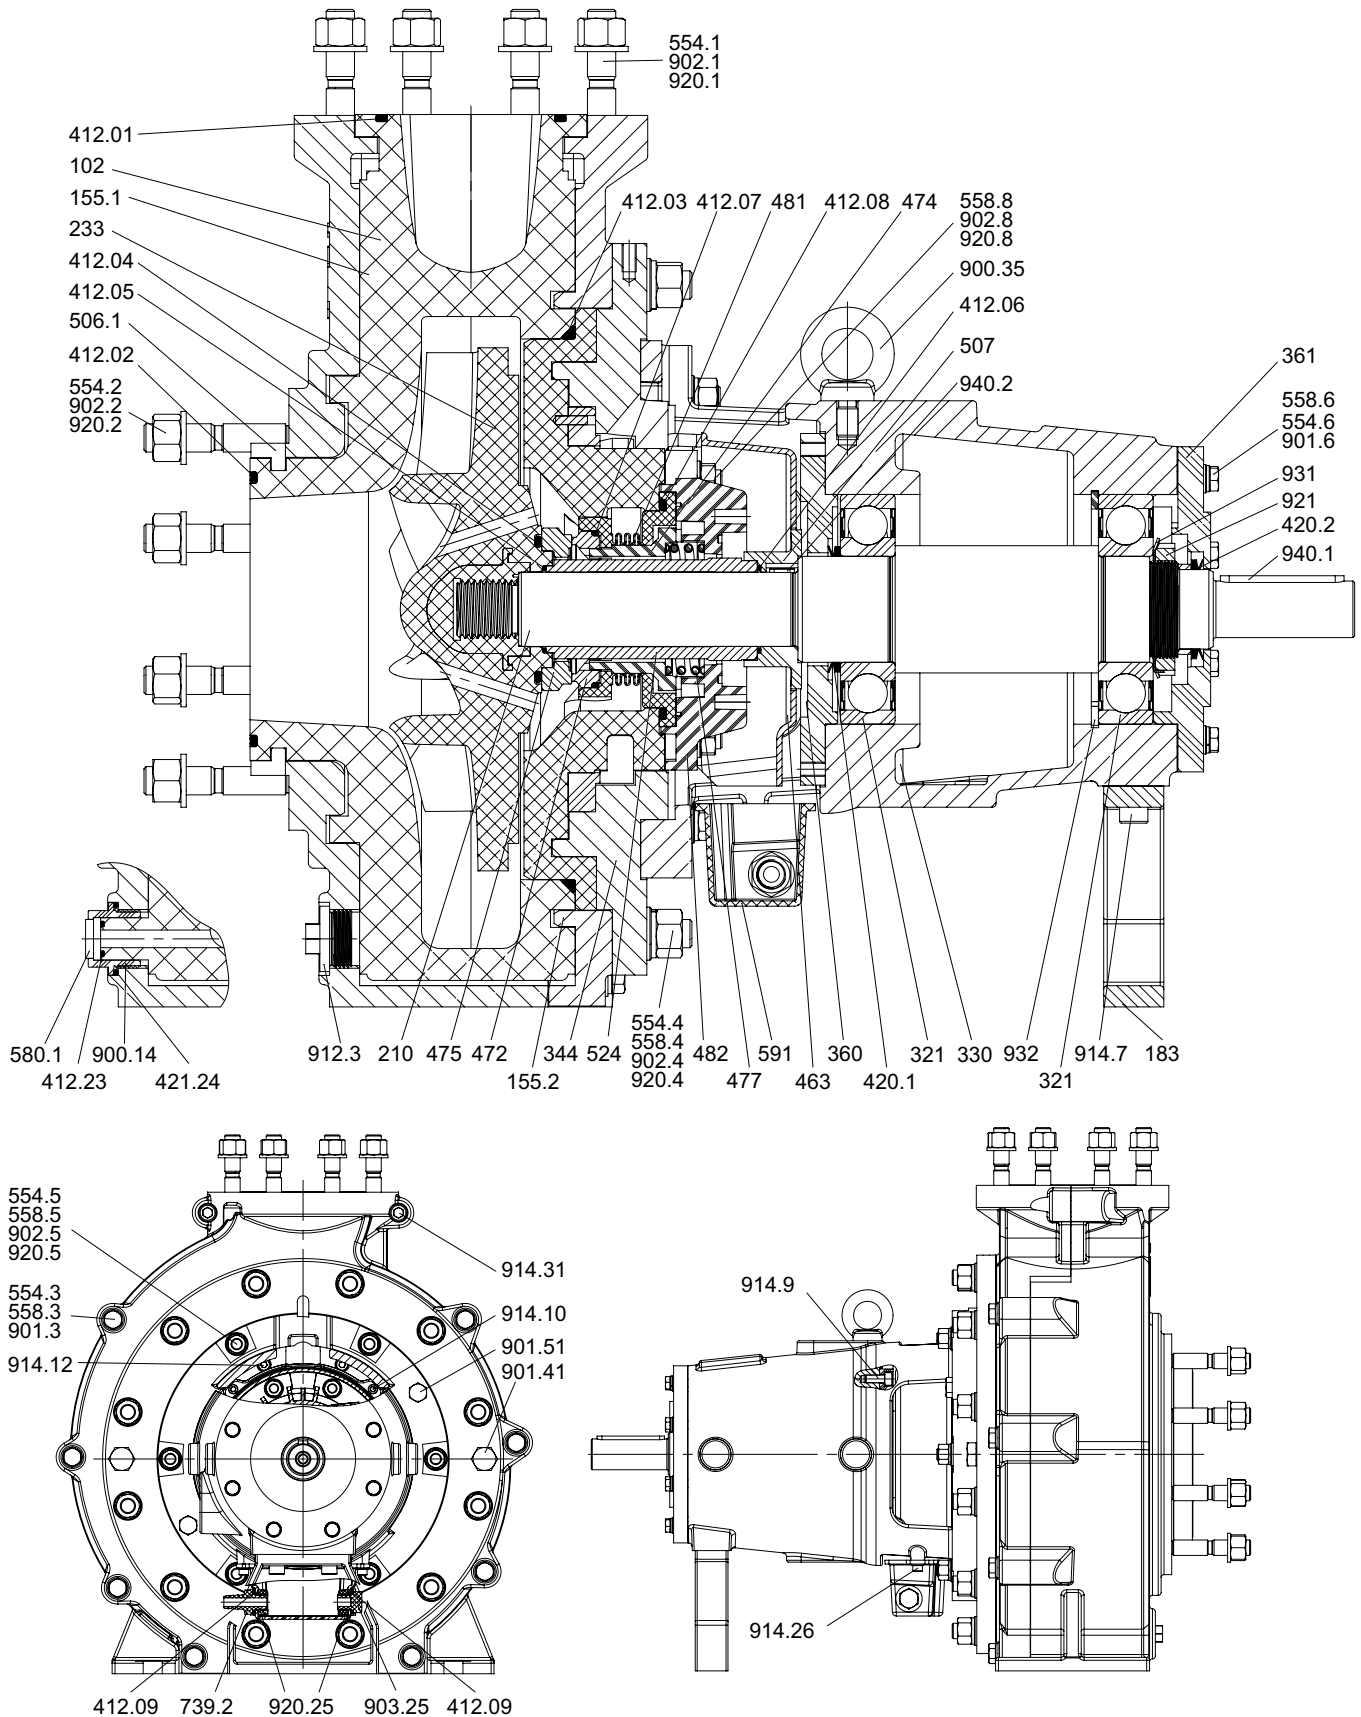




Fig. 19 Sectional drawing

9.2 Technical specifications

 Further technical data (→ data sheet).

9.2.1 Ambient conditions

 Operation under any other ambient conditions should be agreed with the manufacturer.

Temperature [°C]	Relative humidity [%]		Installation height above sea level [m]
	Long-term	Short-term	
-10 to +40 ¹⁾	≤ 85	≤ 100	≤ 1000

Tab. 10 Ambient conditions

1) material-dependent

9.2.2 Parameters for auxiliary systems

Blocking liquid	Parameter
Pressure [bar]	1.5 to 2 above the pressure at the mechanical seal
Temperatures [°C]	<ul style="list-style-type: none"> • Entry +10 bis +15 °C • max. temperature increase 15 °C

Tab. 11 Sealing liquid pressure and exit temperature

9.2.3 Sound pressure level

Sound pressure (LpA) / sound power level (LwA) of the motor in db(A) at the specified speed in rpm

P [kW]	Size	3550		2900		Size	1750		1450		Size	1180		960	
		LpA	LwA	LpA	LwA		LpA	LwA	LpA	LwA		LpA	LwA	LpA	LwA
0.37	–	–	–	–	–	–	–	–	–	–	80M	53	64	42	53
0.55	–	–	–	–	–	80M	55	66	53	64	80M	53	64	42	53
0.75	80M	64	75	60	71	80M	55	66	53	64	90S	55	66	43	54
1.1	80M	64	75	60	71	90S	58	70	56	68	90L	55	66	43	54
1.5	90S	69	81	65	77	90L	58	70	56	68	100L	63	75	59	71
2.2	90L	69	81	65	77	100L	62	74	60	72	112M	63	75	59	71
3	100L	71	83	67	79	100L	62	74	60	72	132S	67	79	63	75
4	112M	73	85	69	81	112M	62	74	58	70	132M	67	79	63	75
5.5	132S	72	84	68	80	132S	68	80	64	76	132M	67	79	63	75
7.5	132S	72	84	68	80	132M	68	80	64	76	160M	70	82	67	79
11	160M	77	89	70	82	160M	69	81	65	77	160M	67	79	67	79
15	160M	77	89	70	82	160L	69	81	65	77	160M	58	71	61	69
18.5	160L	77	89	70	82	180M	68	73	66	70	200L	59	72	64	70
22	180M	78	85	67	80	180L	70	73	68	70	200L	59	72	61	70
30	200L	78	86	67	80	200L	67	73	65	70	225M	59	72	64	70
37	200L	79	85	67	80	225S	68	73	65	70	250M	61	75	62	70
45	225M	75	85	67	80	225M	68	73	65	70	280S	64	77	59	71
55	250M	76	89	71	84	250M	68	74	66	70	280M	64	77	60	71
75	280S	78	91	73	87	280S	77	84	69	79	315S	63	76	63	73
90	280M	78	91	73	86	280M	79	78	70	79	315M	63	76	63	73
110	315S	78	91	73	87	315S	74	83	70	79	315L	62	76	63	74
132	315M	79	91	73	87	315M	78	84	73	79	315L	62	76	67	74
160	315L	82	95	76	90	315L	78	84	73	79	315L	66	81	67	77
200	315L	82	95	76	90	315L	78	83	73	79	–	–	–	–	–
250	315L	–	–	–	–	–	–	–	–	–	–	–	–	–	–

Tab. 12 Sound pressure (LpA) / sound power level (LwA) of the motor in db(A)

Sound pressure (LpA) / sound power level (LwA) of the pump without motor in db(A) at the specified speed in rpm

LTG	Type	3550 ¹		2900 ¹		1750 ²		1450 ²		1180 ³		960 ³	
		LpA	LwA	LpA	LwA	LpA	LwA	LpA	LwA	LpA	LwA	LpA	LwA
1	40-25-160	69	80	66	77	49	60	47	58	–	–	–	–
1	50-32-160	71	82	68	79	51	62	49	60	–	–	–	–
1	50-32-200	72	83	69	80	53	64	51	62	–	–	–	–
1	65-40-200	72	83	69	80	53	64	51	62	–	–	–	–
1	80-50-200	73	84	70	81	56	67	54	65	–	–	–	–
2	65-40-250	80	91	77	88	62	73	60	71	–	–	–	–
2	80-50-250	81	92	78	89	63	74	61	72	–	–	–	–
2	80-50-315	–	–	–	–	68	79	66	77	65	76	64	75
2	100-65-315	–	–	–	–	69	80	67	78	66	77	65	76
2	125-80-200	80	91	77	88	70	81	68	79	–	–	–	–
2	125-80-250	83	94	80	91	75	86	73	84	72	83	71	82
2	125-100-200	80	91	77	88	71	82	69	80	68	79	67	78
3	125-100-250	83	94	81	92	76	87	74	85	73	84	72	83
3	125-100-315	–	–	–	–	78	89	76	87	75	86	74	85
3	150-125-315	–	–	–	–	80	91	78	89	77	88	76	87
3	200-150-250	93	104	91	102	81	92	79	90	78	89	77	88
4	200-150-400	–	–	–	–	83	94	81	92	80	91	79	90
4	250-200-400	–	–	–	–	85	96	83	94	82	93	81	92

Tab. 13 Sound pressure (LpA) / sound power level (LwA) of the pump without motor in db(A)

LTG) Bearing bracket size

- 1) 2-pole motor
- 2) 4-pole motor
- 3) 6-pole motor

Measuring conditions:

- Distance to the pump: 1 m
- Operation: free of cavitation
- Motor: IEC standard motor
- Tolerance ± 3 dB
- Determination of the sound power by the sound intensity measurement method (DIN EN ISO 961 4-2) and Determination of the workplace-related emission value (sound pressure level) LpA to DIN EN ISO 11203

Depending on the noise emissions, the following measures must be taken at places where personnel may be present:

- < 70 db(A) no measures
- > 70 db(A) Personnel continuously exposed to this level of noise must be provided with suitable noise protection.
- < 85 db(A) No special measures are required for personnel who are occasionally exposed to this level of noise for short periods.
- > 85 db(A) This area must be considered a hazard zone. Attach clearly visible warning signs to all points of access. All personnel even if in the area for only a short period, must be compelled to wear ear protection.
- > 105 db(A) Special noise protection appropriate to the noise level and frequency spectrum must be installed. Attach clearly visible warning signs to all points of access. All personnel even if in the area for only a short period, must be compelled to wear a complete acoustic helmet. It must be ensured that the noise emitted via windows, doors and walls does not constitute a hazard to the environment.

Calculation of the total sound pressure level / sound power level

Use the following data for the calculation:

- Sound pressure level / sound power level of the motor being used (LA) (→ Table 12 Sound pressure (LpA) / sound power level (LwA) of the motor in db(A), Page 42).
- Sound pressure level / sound power level of the pump at the operating speed (LB) (→ Table 13 Sound pressure (LpA) / sound power level (LwA) of the pump without motor in db(A), Page 43).

Formula for calculation:

$$\text{Total level} = 10 \lg (10^{LA/10} + 10^{LB/10}) \text{ dB}$$

Example calculation:

LA = 65 dB and LB = 75 dB

$$\text{Total level} = 10 \lg (10^{65/10} + 10^{75/10}) \text{ dB}$$

$$\text{Total level} = 10 \lg (10^{6.5} + 10^{7.5}) \text{ dB}$$

$$\text{Total level} = 75.4 \text{ dB}$$

9.2.4 Tolerance values for adjusting the coupling

Type WK-E-H/DK	A	L2	TA	Max. axial displacement ΔK_a [mm]	Max. angular displacement $\Delta K_{w_{zul}}$ [°]		Max. radial displacement $\Delta K_{r_{zul}}$ [mm]
					at n=		
Size	mm	mm	Nm		1500 min ⁻¹	3000 min ⁻¹	
28	65	20	35	1.5	1	0.75	0.2
38	80	24	42	1.8			
42	95	26	83	2			
48	105	28	145	2.1			
55	120	30	145	2.2			
65	135	35	145	2.6			
75	160	40	362	3			

Tab. 14 Tolerance values for adjusting the coupling


9.2.5 Flange tightening torques

		Tightening torque ¹⁾ MD [Nm] for the versions		
d [mm]	DN [mm]	Flat sealing ring up to max 10 bar	Profile sealing ring up to max 16 bar	O-ring max. 16 bar
32	25	15	12	12
40	32	20	15	15
50	40	25	15	15
63	50	30	20	20
75	65	35	20	20
90	80	35	20	20
110	100	35	20	20
125	100	35	20	20
140	125	45	30	25
160	150	55	35	30
180	150	55	35	30
200	200	65	40	35
225	200	65	40	35
250	250	70	50	40
280	250	70	50	40
315	300	90	60	45
355	350	90	70	50
400	400	100	80	60

Tab. 15 Flange tightening torques

1) Use a torque wrench

9.2.6 Tightening torques of casing screws

 Apply graphite paste to metallic connections prior to assembly.

Size	Metal / metal ¹⁾	Metal / plastic ²⁾	Metal in metal inserts / plastic ³⁾
M6	9	6	5
M8	21	7	6
M10	42	14	10
M12	73	24	25
M16	170	63	30
M20	340	113	32
M24	580	193	34

Tab. 16 Tightening torques of casing screws

- 1) Metal: Screws, nuts, housing, pipes
- 2) Metal: screws, nuts / Plastic: housing, pipes
- 3) Metal: screws in metal inserts / Plastic: housing with screwed in or encapsulated metal inserts

9.2.7 Lubrication

The specified volumes of lubricant are guidance values issued by the manufacturer and should be complied with when lubricating the bearings:

Bearing bracket	Size NX	Grease volume [ml] for free bearings (pump side)	Grease volume [ml] for fixed bearings (motor side)	Oil volume [ml] in the bearing mounting
I	40-25-160	34	51	232
I	50-32-160	34	51	232
I	50-32-200	34	51	232
I	65-40-200	34	51	232
II	65-40-250	101	133	665
I	80-50-200	34	51	232
II	80-50-250	101	133	665
II	80-50-315	101	133	665
II	100-65-315	101	133	665
II	125-80-200	101	133	665
II	125-80-250	101	133	665
II	125-100-200	101	133	665
III	125-100-250	141	181	708
III	125-100-315	141	181	708
III	150-125-315	141	181	708
III	200-150-250	141	181	708
IV	200-150-400	315	372	1141
IV+	250-200-400	315	372	2536

Tab. 17 Lubricant quantities

- Oil change every 10,000 operating hours, at least 1 x year
- Oil specification: Ambient temperature 0- 40°C: CLP oils of viscosity class ISO VG 68-100, DIN 51517-3

9.2.8 Lubricant

	Grease	Oil
Temperature range [°C]	-35 to 140	0 to 140
Viscosity [mm ² /s]	–	198 to 242
Product name	<ul style="list-style-type: none"> • Aralub HL3 • BP Energrease • Glissando FT3 • Glissando 30 • Mobilux, EP3 • Shell Alvania, Fett R3 	<ul style="list-style-type: none"> • Aralub, Degol BG 220 • BP Energol, GR-XP 220 • Falcon, CLP220 • Spartan, EP 220 • Mobilgear, 600 XP • Shell Oil 90 • Shell Omalla Oil 220

Tab. 18 Lubricant

9.2.9 Flushing quantities

Flushing quantities for continuous flushing

LTG	Connec- tion	Internal diameter of the hose [mm]	Minimum flushing quantity at speed (50 Hz) in ltr/h			Minimum flushing quantity at speed (60 Hz) in ltr/h		
			900-1000 min ⁻¹	1400-1500 min ⁻¹	2900-3000 min ⁻¹	1100-1200 min ⁻¹	1700-1800 min ⁻¹	3500-3600 min ⁻¹
1	G 1/4 "	12	30	35	55	35	40	65
2	G 3/8 "	12	35	45	70	40	50	80
3	G 3/8 "	12	50	75	110	55	80	120

Tab. 19 Flushing quantities for continuous flushing, bearing bracket size (LTG) 1 to 3

LTG	Connection	Internal diameter of the hose [mm]	Minimum flushing quantity at speed (50 Hz) in ltr/h			Minimum flushing quantity at speed (60 Hz) in ltr/h		
			700-750 min ⁻¹	900-1000 min ⁻¹	1400-1500 min ⁻¹	850-900 min ⁻¹	1100-1200 min ⁻¹	1700-1800 min ⁻¹
4	G 1/2 "	16	100	120	200	110	130	200

Tab. 20 Flushing quantities for continuous flushing, bearing bracket size (LTG) 4

Flushing quantities for quenching / continuous quenching

Admission pressure when using a flow rate restrictor: 0.8 – 8 bar

LTG	Connec- tion	Internal diameter of the hose [mm]	Quenching quantity at speed (50 Hz) in ltr/h			Quenching quantity at speed (60 Hz) in ltr/h		
			900-1000 min ⁻¹	1400-1500 min ⁻¹	2900-3000 min ⁻¹	1100-1200 min ⁻¹	1700-1800 min ⁻¹	3500-3600 min ⁻¹
1	G 1/4 "	12	approx. 30	approx. 30	approx. 30	approx. 30	approx. 30	approx. 30
2	G 3/8 "	12	approx. 30	approx. 30	approx. 30	approx. 30	approx. 30	approx. 30
3	G 3/8 "	12	approx. 50	approx. 50	approx. 50	approx. 50	approx. 50	approx. 50

Tab. 21 Flushing quantities for quenching / continuous quenching, bearing bracket size (LTG) 1 to 3

LTG	Connec- tion	Internal diameter of the hose [mm]	Quenching quantity at speed (50 Hz) in ltr/h			Quenching quantity at speed (60 Hz) in ltr/h		
			700-750 min ⁻¹	900-1000 min ⁻¹	1400-1500 min ⁻¹	850-900 min ⁻¹	1100-1200 min ⁻¹	1700-1800 min ⁻¹
4	G 1/2 "	16	approx. 70	approx. 70	approx. 70	approx. 70	approx. 70	approx. 70

Tab. 22 Flushing quantities for quenching / continuous quenching, bearing bracket size (LTG) 4

Flushing quantities for double acting mechanical seal

The barrier pressure is dependent on the zero differential head, the specific gravity and the infeed pressure

Calculation of the barrier pressure: $P = (H_0 \times \text{density} \times 0.2 + 15) / 10$ [bar above infeed pressure]

H_0 : Zero differential head

Specific gravity: Medium specific gravity

LTG	Connec- tion	Internal diameter of the hose [mm]	Barrier liquid quantity at speed (50 Hz) in ltr/h			Barrier liquid quantity at speed (60 Hz) in ltr/h		
			900-1000 min ⁻¹	1400-1500 min ⁻¹	2900-3000 min ⁻¹	1100-1200 min ⁻¹	1700-1800 min ⁻¹	3500-3600 min ⁻¹
1	G 1/4 "	12	approx. 25	approx. 30	approx. 50	approx. 30	approx. 35	approx. 55
2	G 3/8 "	12	approx. 35	approx. 40	approx. 65	approx. 40	approx. 45	approx. 70
3	G 3/8 "	12	approx. 45	approx. 70	approx. 100	approx. 50	approx. 75	approx. 110

Tab. 23 Flushing quantities for double-acting mechanical seal, bearing bracket size (LTG) 1 to 3

LTG	Connec- tion	Internal diameter of the hose [mm]	Barrier liquid quantity at speed (50 Hz) in ltr/h			Barrier liquid quantity at speed (60 Hz) in ltr/h		
			700-750 min ⁻¹	900-1000 min ⁻¹	1400-1500 min ⁻¹	850-900 min ⁻¹	1100-1200 min ⁻¹	1700-1800 min ⁻¹
4	G 1/2 "	16	approx. 70	approx. 80	approx. 100	approx. 80	approx. 90	approx. 120

Tab. 24 Flushing quantities for double-acting mechanical seal, bearing bracket size (LTG) 4

9.2.10 Operational limits

Volumetric flow of liquid medium - minimum flow rate

Q _{min}	Short-time operation: 0.1 x Q _{opt} (approx. 5 min.) Continuous operation: 0.15 x Q _{opt}
Q _{max}	See pump capacity curve (→ data sheet)
Q _{opt}	Volumetric flow in pump capacity curve efficiency optimum

Tab. 25 Volumetric flow of liquid medium

If operating point differs, consult the manufacturer.

Run the pump for a maximum of 1 minute against the closed fittings

Discuss the performance with the manufacturer whilst the pump is running for periods > 1 minute against the closed fittings.

Gas content in the liquid medium

Gas content in the liquid medium at reduced delivery rate and reduced differential head. Discuss the performance with the manufacturer.

Maximum dimension of solids in the delivery medium

The dimension of occasional solids in the delivery medium must be less than half the height of the vane and smaller than half the discharge flange nominal width.

Infeed pressure for single-acting STÜBBE PTFE bellows-type mechanical seal

The maximum permissible excess pressure at the pump suction branch is dependent upon the bellows material and the pump speed.

Bellows material	Speed up to 1800 1/min	Speed over 1800 1/min
PTFE	3 bar	2 bar

Tab. 26 Maximum supply pressure

Operating temperature and operating excess pressure of liquid medium

Material	Temperature	Bellows material	maximum permissible operating excess pressure
UHMW-PE	90 °C	PTFE	16 bar
PP	95 °C	PTFE	16 bar
PVDF	115 °C	PTFE	16 bar

Tab. 27 Operating temperature and operating excess pressure of liquid medium


Maximum speeds

The maximum permissible speed must not be exceeded by mechanical transmissions or use of a frequency converter. Maximum permissible speed for respective pump size:

Bearing bracket	Pump size	Max. speed
I	40-25-160	3600
	50-32-160	
	50-32-200	
	65-40-200	
	80-50-200	
II	65-40-250	1800
	80-50-250	
	80-50-315	3600
	100-65-315	
	125-80-200	
	125-80-250	
125-100-200		
III	125-100-250	1800
	125-100-315	
	150-125-315	3600
	200-150-250	
IV	200-150-400	1800
IV+	250-200-400	

Tab. 28 Pump size and maximum speed

9.2.11 Connection loads

 Max. connection loads as per API610.

9.2.12 Switching frequency

Switching frequency

Motor power rating	Switch on / switch off actions per hour
0,18 kW ≤ motors ≤ 7,5 kW	15
11 kW ≤ motors ≤ 30 kW	12
37 kW ≤ motors ≤ 90 kW	8
100 kW ≤ motors ≤ 7,5 kW	5


Tab. 29 Switching frequency

9.3 Special tool

Tool	Use
Impeller wrench	Disassembly / installation of the impellers

Tab. 30 Special tool

9.4 Declaration of conformity in accordance with EC machinery directive

EU Declaration of Conformity	
	
Stübbe GmbH & Co. KG, Hollwieser Straße 5, 32602 Vlotho, Germany, declares on its own authority that the following products	
Description	
Centrifugal pumps with mechanical seal NM, NMB, NX, SHB	
Magnetically-coupled pumps SHM	
Eccentric pumps Type F, Type L	
Sump pumps ET, ETL, ETLB, ETLB-S, ETLB-T, ETLB-ST	
to which this declaration relates, are in conformity with the following standards:	
	Machinery Directive 2006/42/EC EMC Directive 2014/30/EU With regard to electrical hazards the protective aims of Low Voltage Directive 2014/35/EU have been complied with according to Appendix I no. 1.5.1 of the Machinery Directive 2006/42/EU.
Place and date	Name and signature of authorized person
<u>Vlotho, 25.01.2018</u>	<u>pp Achim Kaesberg,</u> Manager Corporate Data

ПромХимТех - дистрибьютор Stubbe
www.promhimtech.ru
zakaz@promhimtech.ru
 8 800 250 0154